


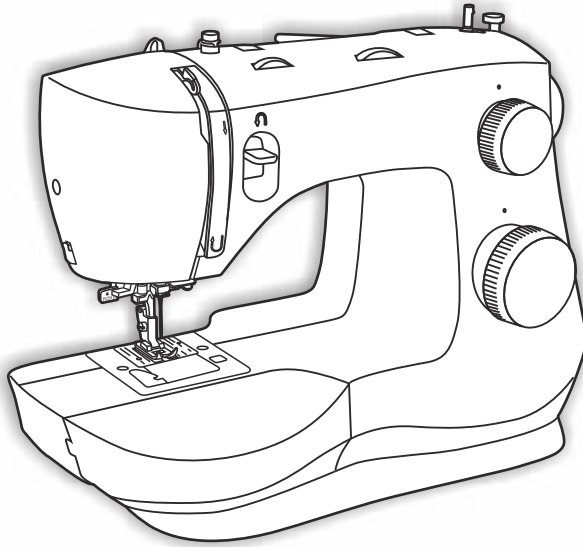

SINGER®

3342 Instruction Manual

IMPORTANT SAFETY INSTRUCTIONS

This household sewing machine is designed to comply with IEC/EN 60335-2-28 and UL1594.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using this household sewing machine. Keep the instructions in a suitable place close to the machine. Make sure to hand them over if the machine is given to a third party.

DANGER - To reduce the risk of electric shock :

- A sewing machine should never be left unattended when plugged in. Always unplug this sewing machine from the electric outlet immediately after using and before cleaning, removing covers, lubricating or when making any other user servicing adjustments mentioned in the instruction manual.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to person :

- Do not allow to be used as a toy. Close attention is necessary when this sewing machine is used by or near children.
- Use this sewing machine only for its intended use as described in this manual. Use only attachments recommended by the manufacturer as contained in this manual.
- Never operate this sewing machine if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the sewing machine to the

nearest authorized dealer or service center for examination, repair, electrical or mechanical adjustment.

- Never operate the sewing machine with any air openings blocked. Keep ventilation openings of the sewing machine and foot control free from the accumulation of lint, dust, and loose cloth.
- Keep fingers away from all moving parts. Special care is required around the sewing machine needle.
- Always use the proper needle plate. The wrong plate can cause the needle to break.
- Do not use bent needles.
- Do not pull or push fabric while stitching. It may deflect the needle causing it to break.
- Wear safety glasses.
- Switch the sewing machine off ("O") when making any adjustment in the needle area, such as threading needle, changing needle, threading bobbin, or changing presser foot, etc.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off ("O") position, then remove plug from outlet.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- The foot control is used to operate the machine. Avoid placing other objects on the foot control.
- Do not use the machine if it is wet.
- If the LED lamp is damaged or broken, it must be replaced by the manufacturer or its service agent or a similarly qualified person, in order to avoid a hazard.
- If the supply cord connected with the foot control is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person, in order to avoid a hazard.
- This sewing machine is provided with double insulation. Use only identical replacement parts. See instructions for Servicing of Double-Insulated Appliances.

SAVE THESE INSTRUCTIONS

For Europe only :

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

The noise level under normal operating conditions is less than 75dB(A).

The machine must only be used with foot control of type KD-1902, FC-1902 (110-120V area) / KD-2902, FC-2902A, FC-2902C, FC-2902D (220-240V area) manufactured by ZHEJIANG FOUNDER MOTOR CORPORATION LTD. (China) / 4C-316B (110-125V area) / 4C-316C (127V area) / 4C-326C (220V area) / 4C-326G (230V area) / 4C-336G (240V area) / 4C-336G (220-240V area) manufactured by Wakaho Electric Ind. Co., Ltd. (Vietnam)

For outside Europe :

This sewing machine is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the sewing machine by a person responsible for their safety. Children should be supervised to ensure that they do not play with the sewing machine.

The noise level under normal operating conditions is less than 75dB(A).

The machine must only be used with foot control of type KD-1902, FC-1902 (110-120V area) / KD-2902, FC-2902A, FC-2902C, FC-2902D (220-240V area) manufactured by ZHEJIANG FOUNDER MOTOR CORPORATION LTD. (China) / 4C-316B (110-125V area) / 4C-316C (127V area) / 4C-326C (220V area) / 4C-326G (230V area) / 4C-336G (240V area) / 4C-336G (220-240V area) manufactured by Wakaho Electric Ind. Co., Ltd. (Vietnam)

SERVICING OF DOUBLE INSULATED PRODUCTS

In a double-insulated product, two systems of insulation are provided instead of grounding. No ground means is provided on a double-insulated product, nor should a means for grounding be added to the product. Servicing of a double-insulated product requires extreme care and knowledge of the system and should be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to those parts in the product. A double-insulated product is marked with the words “DOUBLE INSULATION” or “DOUBLE INSULATED”.

Congratulations

As the owner of a new SINGER® sewing machine, you are about to begin an exciting adventure in creativity. From the moment you first use your machine, you will know you are sewing on one of the easiest to use sewing machines ever made.

May we recommend that, before you start to use your sewing machine, you discover the many features and the ease of operation by going through this instruction book, step by step, seated at your machine.

To ensure that you are always provided with the most modern sewing capabilities, the manufacturer reserves the right to change the appearance, design or accessories of this sewing machine when considered necessary.

SINGER® is the exclusive trademark of The Singer Company Limited S.à.r.l. or its Affiliates.

©2016 The Singer Company Limited S.à.r.l. or its Affiliates. All rights reserved.

☐ List of contents

Machine Basics

Principal Parts of the Machine	1-2
Connecting Machine to Power Source	3
Two Step Presser Foot Lifter	4
Accessories	5

Treading the Machine

Winding the Bobbin	6
Inserting the Bobbin	7
Threading the Upper Thread	8
Automatic Needle Threader	9
Raising the Bobbin Thread	10
Thread Tension	11

Sewing


How to Choose Your Pattern	12
Stitch Width Dial & Stitch Length Dial	13
Sewing Straight Stitch	14
Reverse Sewing	15
Removing the Work	15
Cutting the Thread	15
Choosing Stretch Stitch Patterns	16
Blind Hem	17
Buttonholes	18
Sewing on Buttons	19

General Information

Installing the Removable Extension Table	20
Changing the presser foot	21
Needle/ Fabric/ Thread Chart	22
Darning plate	23

Maintenance and Troubleshooting

Inserting the needle	24
Cleaning the Feed Teeth and Hook Area	25
Troubleshooting Guide	26

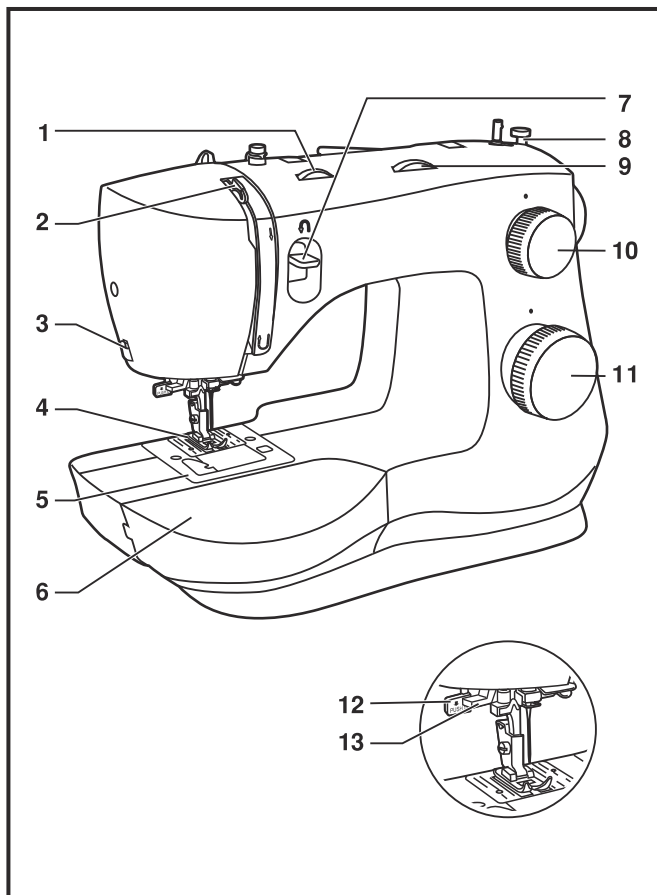


□ Principal Parts of the Machine

1. Thread tension dial
2. Thread take-up lever
3. Thread cutter
4. Presser foot
5. Needle plate
6. Removable extension table/ accessory storage
7. Reverse sewing lever
8. Bobbin stopper
9. Stitch width dial
10. Stitch length dial
11. Pattern selector dial
12. One step buttonhole lever
13. Automatic threader

Unpacking

- Place the box on a steady, flat surface. Lift your machine out of the box and remove the outer packaging.
- Remove all other packing material and the plastic bag.

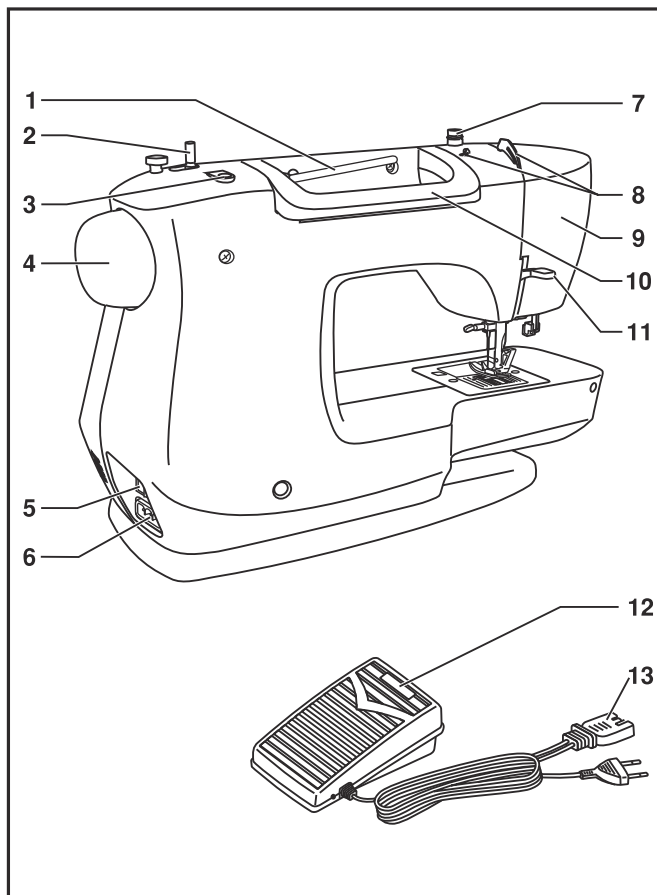

□ Principal Parts of the Machine

1. Horizontal spool pin
2. Bobbin winding spindle
3. Hole for auxiliary spool pin
4. Handwheel
5. Power and light switch
6. Main plug socket
7. Bobbin thread guide
8. Upper thread guide
9. Face plate
10. Handle
11. Presser foot lifter
12. Foot speed control
13. Power cord

□ Connecting Machine to Power Source

Connect the machine to a power source as illustrated. (1)

This appliance is equipped with a polarized plug which must be used with the appropriate polarized outlet. (2)

Attention:

Unplug power cord when machine is not in use.

Foot control

The foot control pedal regulates the sewing speed. (3)

Attention:




Consult a qualified electrician if in doubt of how to connect machine to power source.


Sewing light

Press main switch (A) to “I” for power and light.

IMPORTANT NOTICE

For appliance with a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not modify the plug in any way.

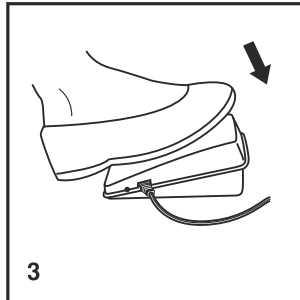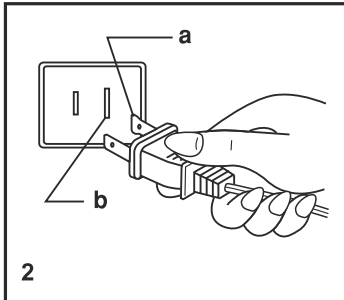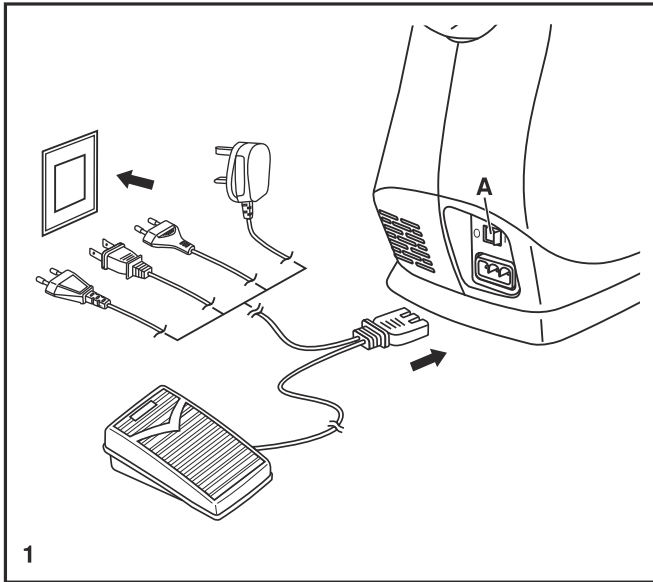

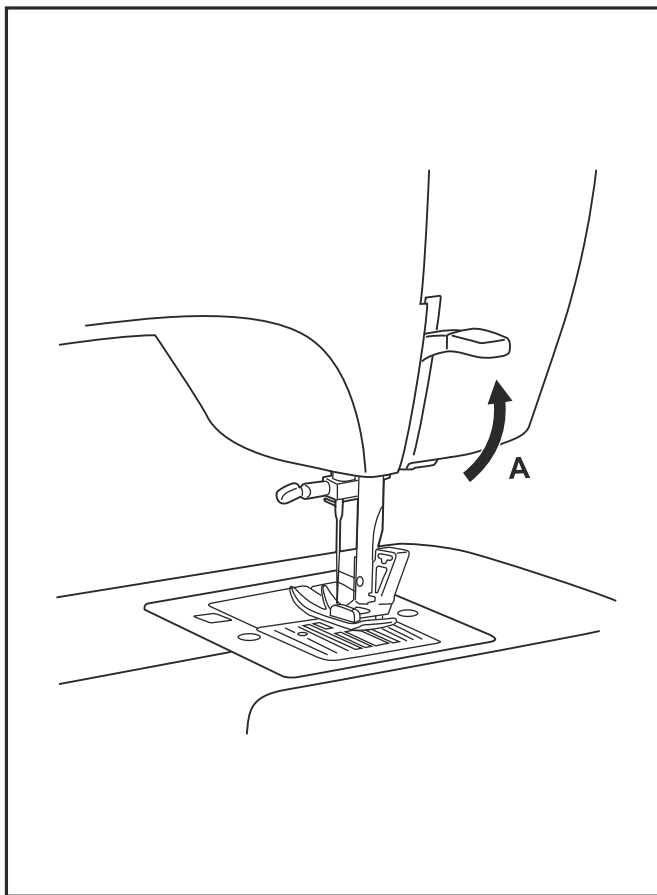


☐ Two Step Presser Foot Lifter

When sewing several layers or thick fabrics, the presser foot can be raised to a higher position for easy positioning of the work. (A)

Attention:

Your SINGER® machine is adjusted to provide the best stitch result at normal room temperature. Extreme hot and cold temperatures can affect the sewn result.

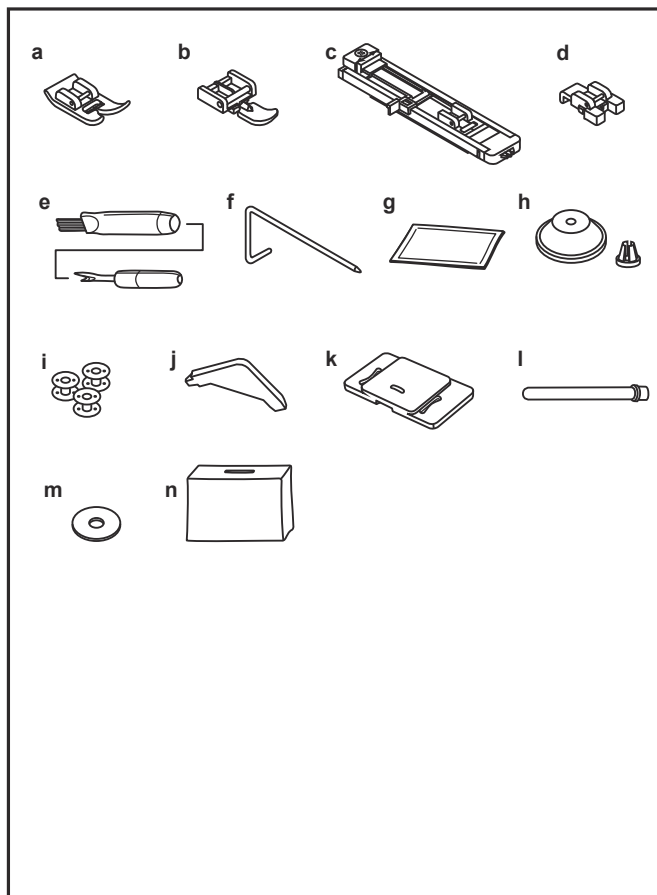












Accessories

Standard accessories

- a. All purpose foot
- b. Zipper foot
- c. Buttonhole foot
- d. Button sewing foot
- e. Seam ripper/ brush
- f. Edge/ quilting guide
- g. Pack of needles
- h. Spool holders
- i. Bobbin (3x)
- j. L-screwdriver
- k. Darning plate
- l. Auxiliary Spool Pin
- m. Spool pin felt
- n. Soft cover

Optional Accessories:

For information about additional presser feet, attachments and accessories that may be available for your machine, visit www.singer.com.

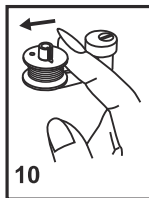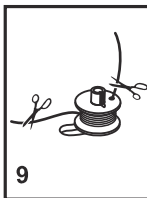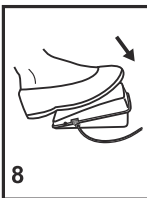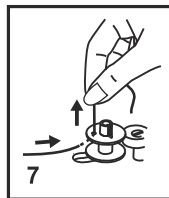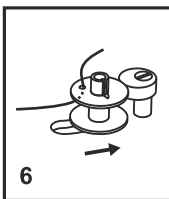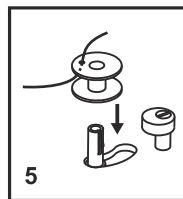
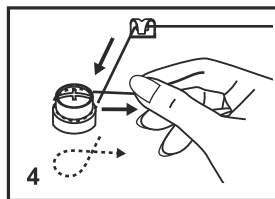
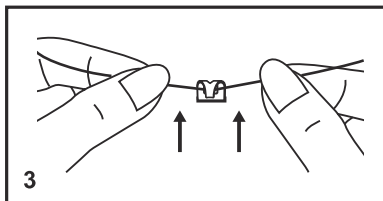


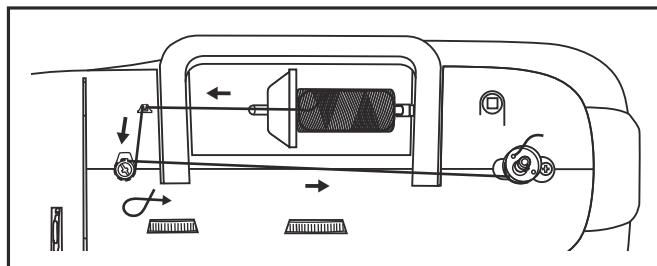


□ Winding the Bobbin

- Place thread and corresponding spool holder on to spool pin. (1/2)
- Snap thread into thread guide. (3)
- Wind thread clockwise around bobbin winder tension discs. (4)
- Thread bobbin as illustrated and place on spindle. (5)
- Push bobbin spindle to right. (6)
- Hold thread end. (7)
- Step on foot control pedal. (8)
- Cut thread. (9)
- Push bobbin spindle to left (10) and remove.

Please Note:

When the bobbin winder spindle is in “bobbin winding” position, the machine will not sew and the hand wheel will not turn. To start sewing, push the bobbin winder spindle to the left (sewing position).

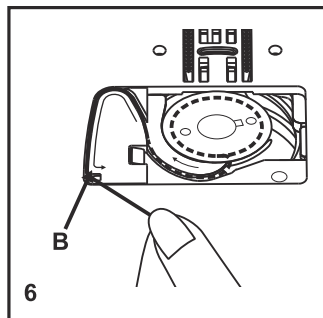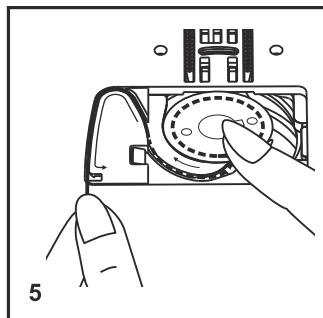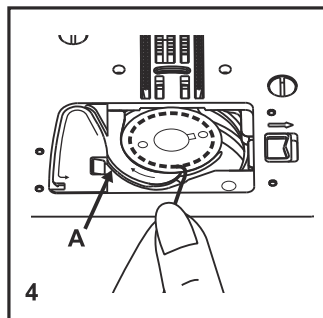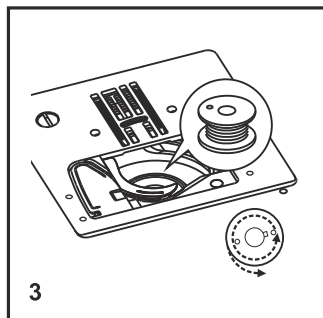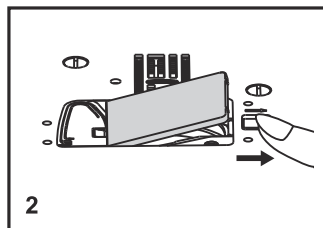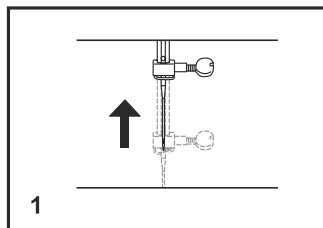


□ Inserting the Bobbin

- When inserting or removing the bobbin, the needle must be fully raised. (1)
- Remove the bobbin cover plate and bobbin. (2)
- Insert the bobbin in the bobbin case with the thread running in a counterclockwise direction (arrow). (3)
- Pull the thread through the slit (A). (4)
- With a finger held gently on top of the bobbin, place thread into guides as shown. (5)
- To cut off excess thread pull it toward you to cut it with the cutter at point (B). Replace the bobbin cover plate. (6)

Attention:

Turn power switch to off ("O") before inserting or removing the bobbin.

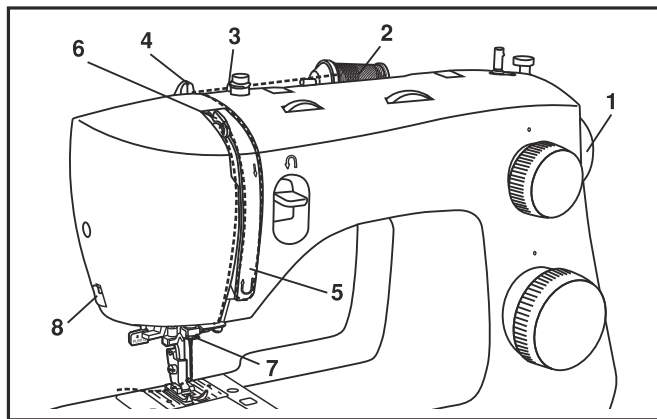


□ Threading the Upper Thread



This is a simple operation but it is important to carry out correctly as by not doing so several sewing problems could result.

- Start by raising the needle to its highest point (1), and continue turning the handwheel counterclockwise until the needle just slightly begins to descend. Raise the presser foot to release the tension discs.

Note: For safety, it is strongly suggested you turn off the power before threading.

- Lift up the spool pin. Place the spool of thread on the holder with the thread coming off the spool as shown. For small thread spools, place small side of spool holder next to spool. (2)
- Draw thread from spool through the upper thread guide (3) and pulling thread through pre-tension spring as illustrated. (4)
- Thread tension module by leading thread down right channel and up left channel. (5) During this process it is helpful to hold the thread between the spool and thread guide. (4)
- At the top of this movement pass thread from right to left through the slotted eye of the take-up lever and then downwards again. (6)
- Now pass the thread behind the horizontal thread guide, and then behind the thin wire needle clamp guide (7) and then down to the needle which should be threaded from front to back.
- Pull about 6-8 inches of thread to the rear beyond the needle eye. Trim thread to length with built in thread cutter. (8)

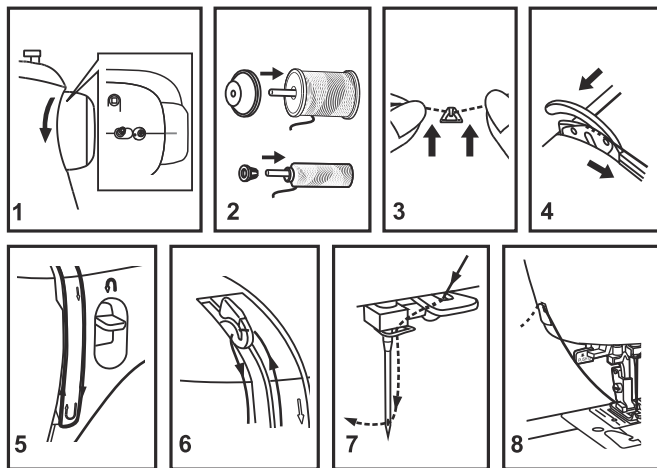

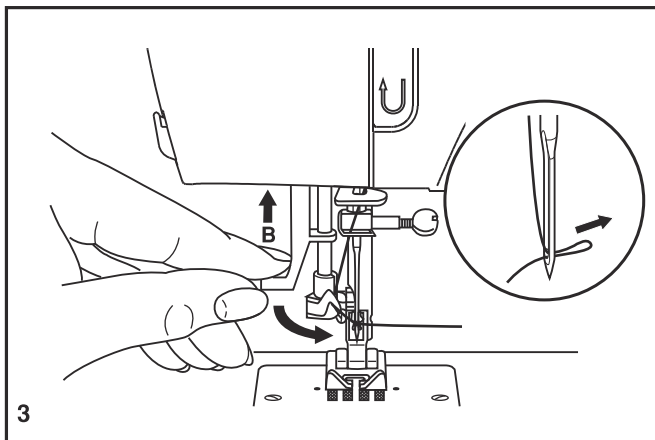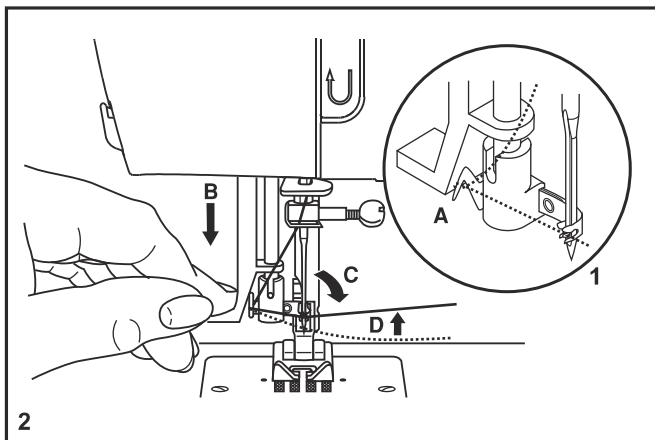

□ Automatic Needle Threader

- Raise the needle to its highest position.
- Pass thread around thread guide (A). (1)
- Press lever (B) down as far as it will go. (2)
- The threader automatically swings to the threading position (C).
- Pass the thread in front of the needle around the hook (D) from bottom to top.
- Release lever (B). (3)
- Pull the thread through the needle eye.

Attention:

Turn power switch to off ("O")!




□ Raising the Bobbin Thread

Hold the upper thread with the left hand. (1)

Turn the handwheel towards you (counterclockwise) lowering, then raising needle.


Note:

If it is difficult to raise the bobbin thread, check to make sure the thread is not trapped by the hinged cover or the Removable Extension Table.

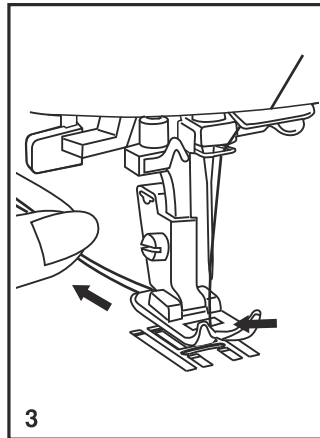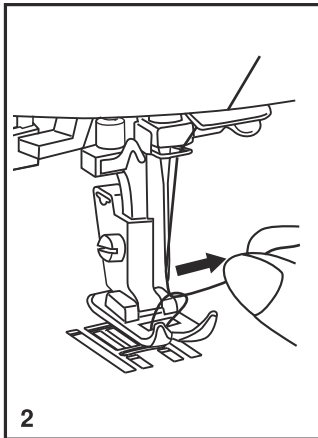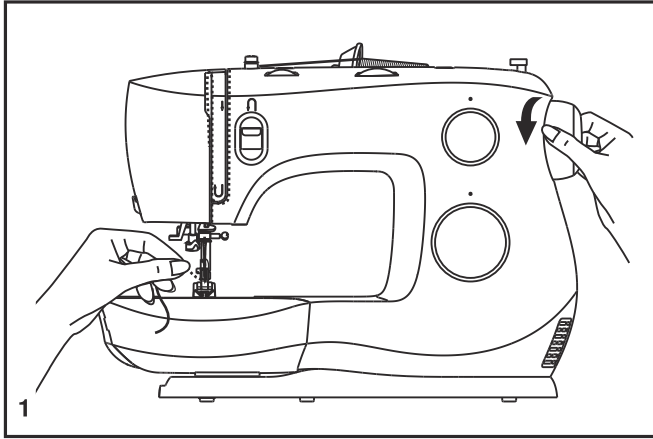

Gently pull on the upper thread to bring the bobbin thread up through the needle plate hole. (2)

Lay both threads to the back under the presser foot. (3)

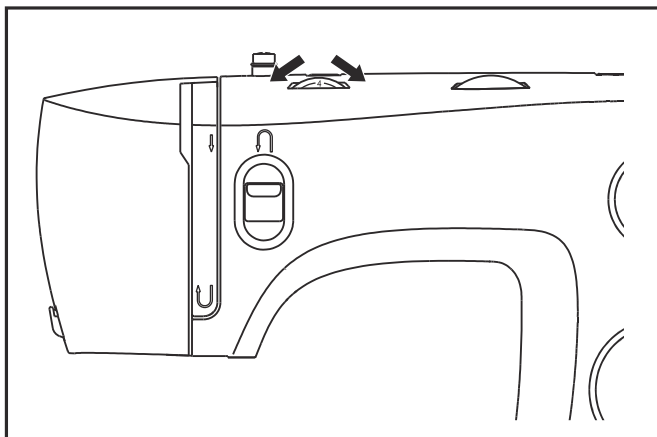

□ Thread Tension

Upper thread tension

Basic thread tension setting: "4".

To increase the tension, turn the dial to the next number up.

To reduce the tension, turn the dial to the next number down.





1. Normal thread tension for straight stitch sewing.
2. Thread tension too loose for straight stitch sewing. Turn dial to higher number.
3. Thread tension too tight for straight stitch sewing. Turn dial to lower number.
4. Normal thread tension for zig zag and decorative sewing.
Correct thread tension is when a small amount of the upper thread appears on the bottom side of fabric.



Lower thread tension

The bobbin tension has been set correctly at the factory, so you do not need to adjust it.

Please note:

- Proper setting of tension is important to good sewing.
- There is no single tension setting appropriate for all stitch functions, thread or fabric.
- A balanced tension (identical stitches both top and bottom) is usually only desirable for straight stitch construction sewing.
- 90% of all sewing will be between "3" and "5".
- For zig zag and decorative sewing stitch functions, thread tension should generally be less than for straight stitch sewing.
- For all decorative sewing you will always obtain a nicer stitch and less fabric puckering when the upper thread appears on the bottom side of your fabric.

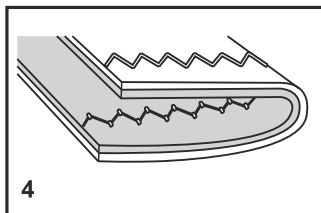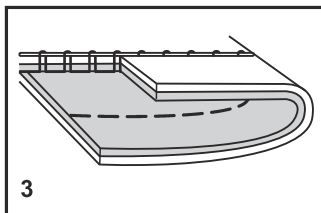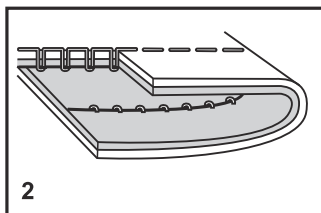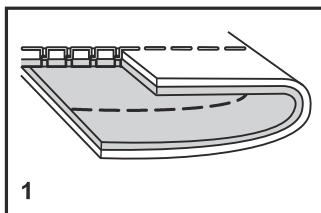

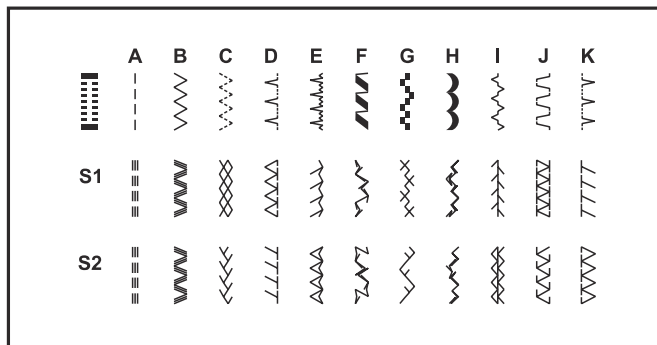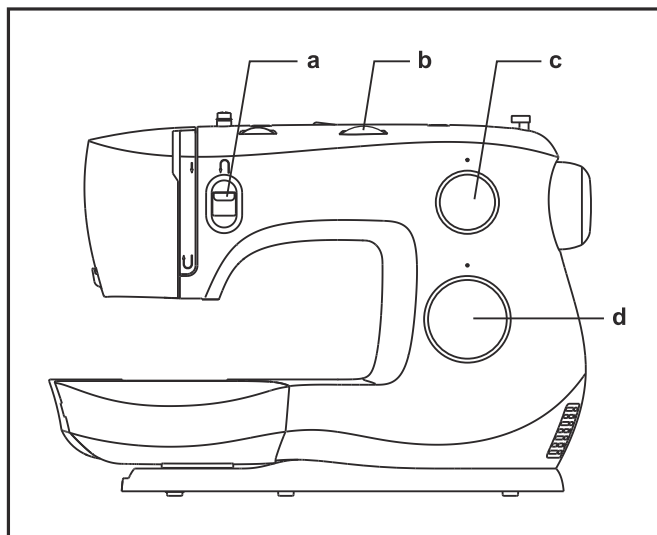

□ How to Choose Your Pattern

The diagram on this page display the stitch patterns available on the machine.



Stitches in the top of the diagram are indicated on the Pattern Selector Dial in gray. To select the patterns indicated with the gray color, turn the Pattern Selector Dial. (d)

Use the Stitch Length Dial (c) to adjust the stitch length as desired for the project. Use the Stitch Width (b) to adjust the width of the stitch as desired.

To obtain the other patterns, turn the stitch length dial to “S1” or “S2” and select the pattern desired with pattern selector dial.

The Pattern Selector Dial may be turned in either direction.

- a. Reverse Sewing Lever
- b. Stitch Width Dial
- c. Stitch Length Dial
- d. Pattern Selector Dial

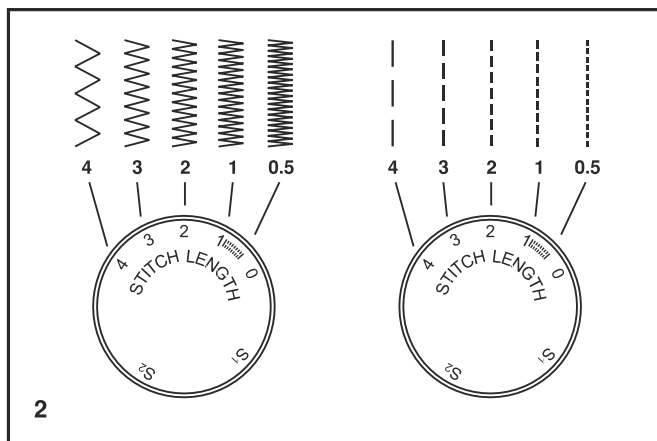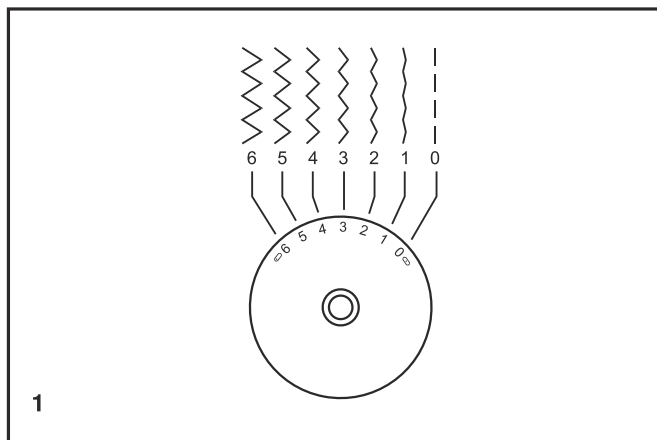

□ **Stitch Width Dial & Stitch Length Dial**

Function of stitch width dial

The maximum zigzag stitch width for zigzag stitching is 6mm; however, the width can be reduced on any patterns. The width increases as you move zigzag dial from “0” - “6”. (1)

The Stitch Width Dial is also the control for the straight stitch infinite needle position. “0” is center needle position, “6” is full left.

Function of stitch length dial while zig-zag stitching

Set the Pattern Selector Dial to zig-zag.

The density of zig-zag stitches increase as the setting of stitch length dial approaches “0”.

Neat zig-zag stitches are usually achieved at “3” or below. (2)

Dense zig-zag stitches are called satin stitches. (2)

Function of stitch length dial for when straight stitching


For straight stitch sewing, turn the Pattern Selector Dial to the straight stitch setting. Turn the Stitch Length Dial, and the length of the individual stitches will decrease as the dial approached “0”. The length of the individual stitches will increase as the dial approaches “4”. Generally speaking, use a longer stitch length when sewing heavier weight fabrics or when using a thicker needle or thread. Use a shorter stitch length when sewing lighter weight fabrics or when using a finer needle or thread.

☐ Sewing Straight Stitch


To begin sewing, set the machine for straight stitch. (1)

Place the fabric under the presser foot with the fabric edge lined up with the desired seam guide line on the needle plate. (2)


Lower the presser foot lifter, and then step on the foot controller to start sewing. (3)

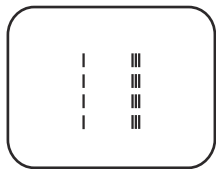



1

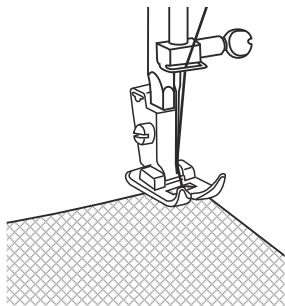

2

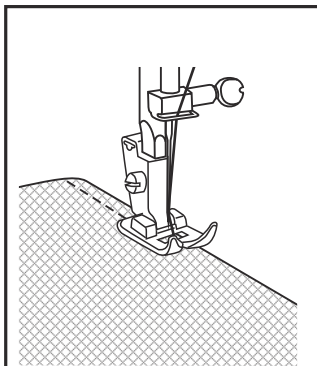

3

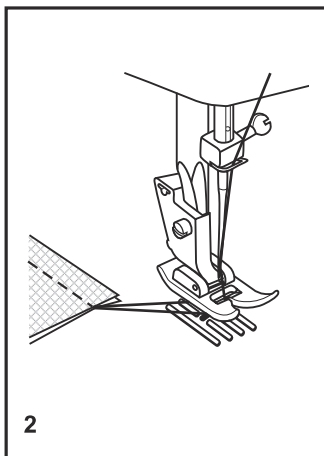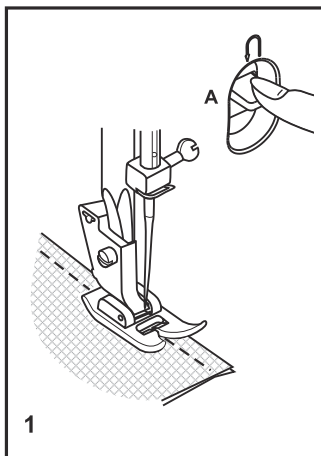


☐ Reverse Sewing

To secure the beginning and the end of a seam, press down the reverse sewing lever (A). Sew a few reverse stitches. Release the lever and the machine will sew forward again. (1)



☐ Removing the Work

Turn the handwheel toward you (counterclockwise) to bring the thread take up lever to its highest position, raise the presser foot and remove work behind the needle and presser foot. (2)

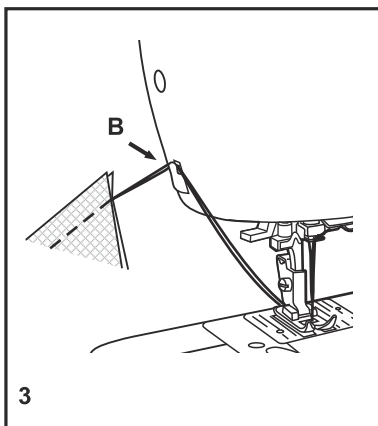

☐ Cutting the Thread

Pull the threads under and behind the presser foot. Guide the threads to the side of the face plate and into thread cutter (B). Pull threads down to cut. (3)

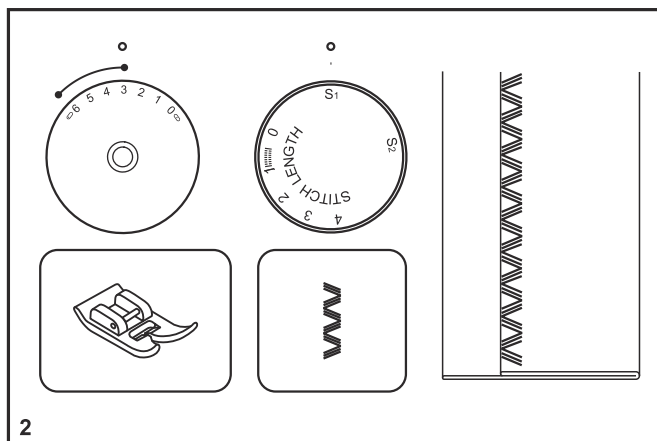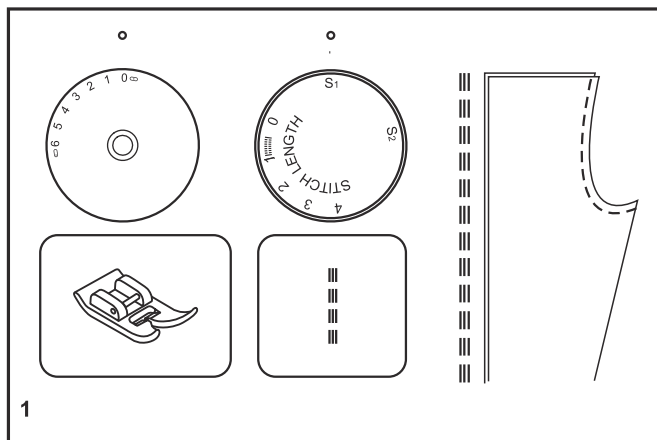

□ Choosing Stretch Stitch Patterns

The stretch stitch patterns are indicated with blue and red colors on the pattern selector dial.

To select these stitches, turn the Pattern Selector Dial to the desired pattern. Then, turn the Stitch Length Dial to the indicator marked "S1" or "S2". Though there are several stretch patterns, here are two examples:

Straight Stretch Stitch (1)

Set the Pattern Selector Dial to "1".

Used to add triple reinforcement to stretch and hardwearing seams.


The machine sews two stitches forward and one stitch backwards.

Ric Rac (2)

Set the Pattern Selector Dial to "2".

Adjust the Stitch Width Dial to between "3" and "6".

Ric Rac Stitch is suitable for firm fabrics like denim, corduroy, poplin, duck, etc.

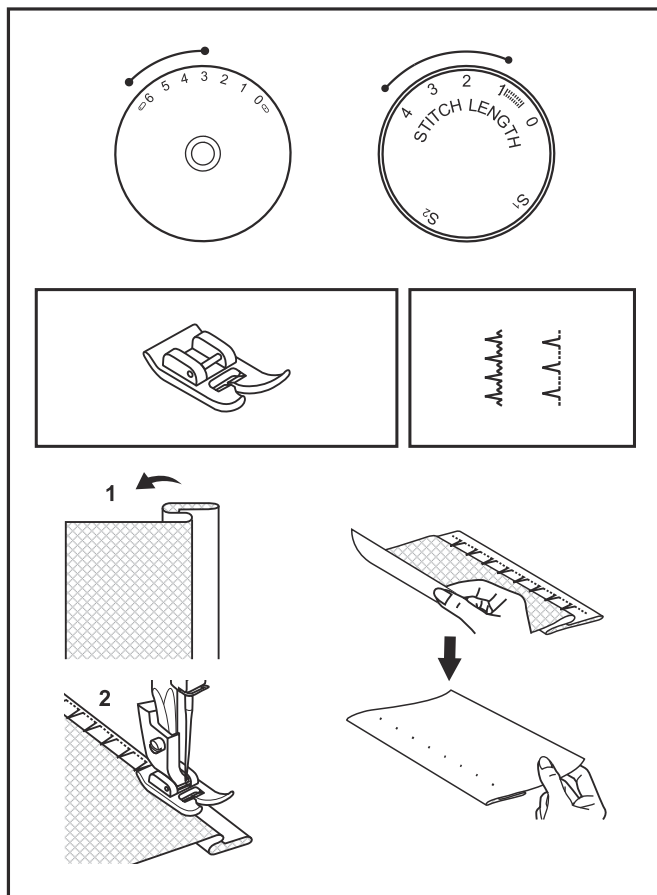

□ Blind Hem

For hems on curtains, trousers, skirts, etc.

~~~~~ Blind hem for stretch fabrics.

^.^.^ Blind hem for firm fabrics.

Set the Stitch Length Dial with the range shown on the diagram at the right. Blind hems, however, are normally sewn with a longer stitch length setting. Set the Stitch Width Dial at a setting appropriate for the weight/type of fabric being sewn, within the range shown in the diagram on the right of the page. Generally, a narrower stitch is used for lighter weight fabrics, and a wider stitch is used for heavier weight fabrics. Sew a test first to make sure the machine settings are appropriate for the fabric.

### Blind Hem:


Turn up the hem to the desired width and press. Fold back (as shown in Fig. 1) against the right side of the fabric with the top edge of the hem extending about 7 mm (1/4") to the right side of the folded fabric.

Start to sew slowly on the fold, making sure the needle touches slightly the folded top to catch one or two fabric threads. (2)

Unfold the fabric when hemming is completed and press.

### Note:

To make blind hem sewing even easier, use a blind hem foot, available from your SINGER® retailer.

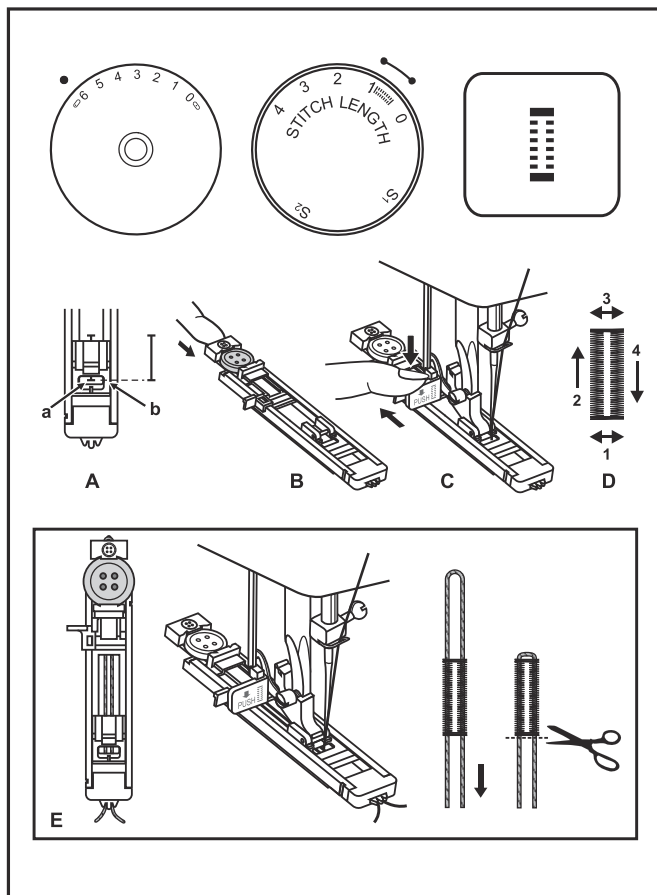

## ■ Buttonholes

**Buttonhole sewing is a simple process that provides reliable results. However, it is strongly suggested to always make a practice buttonhole on a sample of your fabric and stabilizer.**

### **Making a Buttonhole**

1. Using tailor's chalk, mark the position of the buttonhole on the fabric.
2. Attach the buttonhole foot and set the Pattern Selector Dial to "1". Set stitch length dial to "4". Set the stitch width at "6". The width however may need to be adjusted according to the project. Sew a test first to determine this.
3. Lower the presser foot aligning the marks on foot with the marks on the fabric (A). (The front bar tack will be sewn first.) (Align the mark on the fabric (a) with the mark on the foot (b).)
4. Open the button plate and insert the button (B).
5. Lower the buttonhole lever and gently push it back (C).
6. While lightly holding the upper thread, start the machine.
7. Buttonhole stitching is done in the order (D).
8. Stop the machine when the buttonhole cycle has completed.

### **Making a Buttonhole on Stretch Fabrics (E)**

When sewing buttonholes on stretch fabric, hook heavy thread or cord under the buttonhole foot. When the buttonhole is sewn the legs will overcast the cord.

1. Mark the position of the buttonhole on the fabric with the tailor's chalk, attach the buttonhole foot, and set the pattern selector dial to "1". Set stitch length dial to "4".
2. Hook the heavy thread onto the back end of the buttonhole foot, then bring the two heavy thread ends to the front of the foot, insert them into the grooves and temporarily tie them there.
3. Lower the presser foot and start sewing.  
\*Set the stitch width to match the diameter of the gimp thread.
4. Once sewing is completed, gently pull the heavy thread to remove any slack, then trim off the excess.

## □ Sewing on Buttons

Install the darning plate. (1)

Change the all purpose foot to the button sewing foot. (2)


Set the stitch length to "0".

Place the button and fabric under the Button Sewing foot, as illustrated in (3).

Set the machine for zig-zag stitch, then set the width to number "3" - "6". Turn the handwheel to check that the needle goes cleanly into the left and right holes of the button. Adjust the stitch width, as needed, according to the distance between the holes of the button. Slowly sew on the button with about 10 stitches.

Raise the needle out of the fabric. Set the machine for straight stitch again, then sew a few securing stitches to finish.


If a shank is required, place a darning needle on top of the button and sew (4) . For buttons with 4 holes, sew through the front two holes first, push the work forward and then sew through the back two holes.

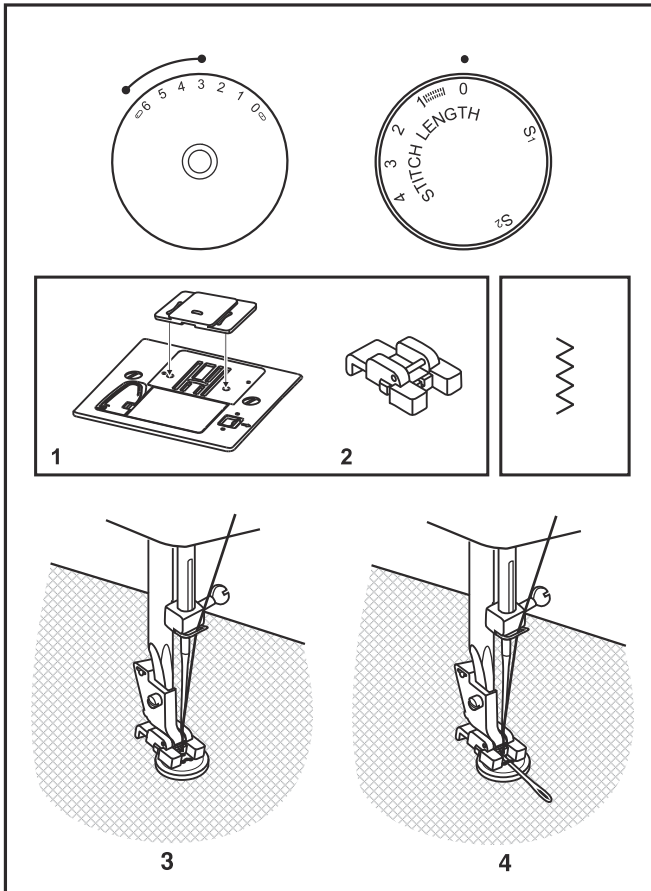

## □ Installing the Removable Extension Table


Hold the removable extension table horizontally, and push it in the direction of the arrow. (1)





To remove the extension table, pull it toward the left.

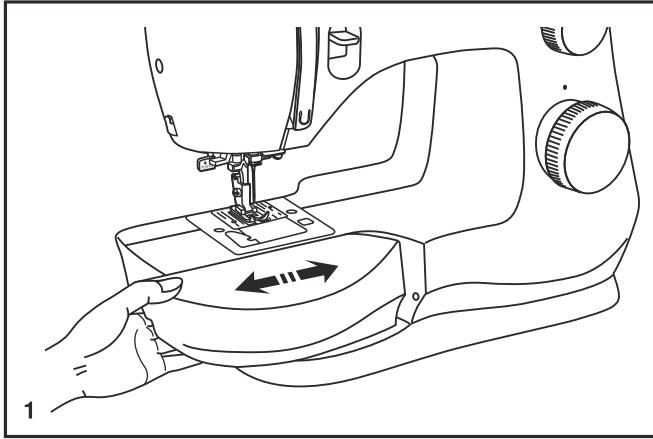

The inside of the removable extension table can be utilized as an accessory box.

To open, flip cover down as shown. (2)

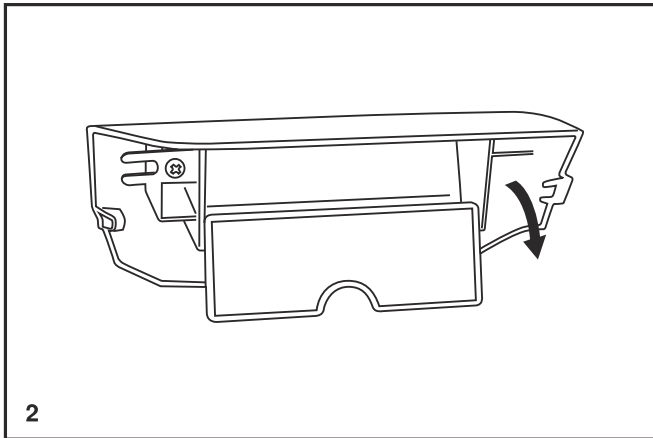

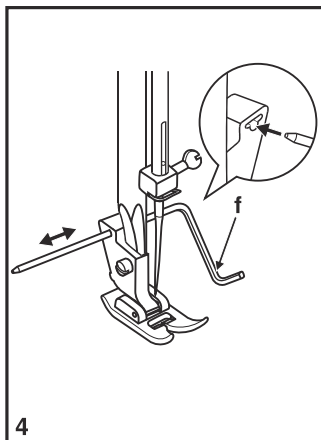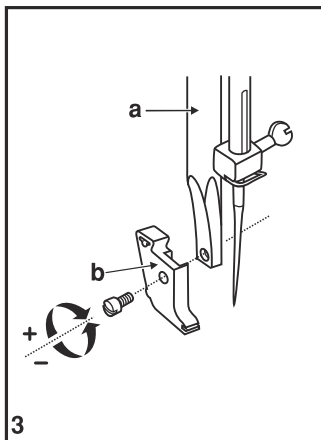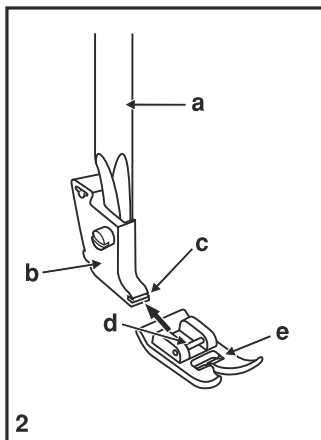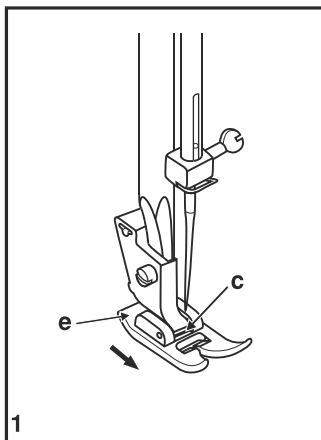

## □ Changing the presser foot

### Removing the presser foot

Push the presser foot (e) to disengage from the cut-out (c). (1)

### Attaching the presser foot

Install the pin (d) of the presser foot (e) into the cut-out (c) of the presser foot holder. (2)

### Removing and Attaching the presser foot shank

Raise the presser bar (a) with the presser foot lifter.

Remove and attach the presser foot shank (b) as illustrated. (3)

### Attaching the edge/ quilting guide

Attach the edge/quilting guide (f) in the slot as illustrated.

Adjust as needed for hems, pleats, quilting, etc. (4)

### Attention:

Turn power switch to off ("O") when carrying out any of the above operations!

## ☐ Needle/ Fabric/ Thread Chart

### NEEDLE, FABRIC, THREAD SELECTION GUIDE

| NEEDLE SIZE   | FABRICS                                                                                                                                            | THREAD                                                                                                                                                                                                                                    |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 9-11 (70-80)  | Lightweight fabrics-thin cottons, voile, silk, muslin, interlocks, cotton knits, tricot, jerseys, crepes, woven polyester, shirt & blouse fabrics. | Light-duty thread in cotton, nylon, polyester or cotton wrapped polyester.                                                                                                                                                                |
| 11-14 (80-90) | Medium weight fabrics-cotton, satin, kettlecloth, sailcloth, double knits, lightweight woolens.                                                    | Most threads sold are medium size and suitable for these fabrics and needle sizes.<br>Use polyester threads on synthetic materials and cotton on natural woven fabrics for best results.<br>Always use the same thread on top and bottom. |
| 14 (90)       | Medium weight fabrics-cotton duck, woolen, heavier knits, terrycloth, denims.                                                                      |                                                                                                                                                                                                                                           |
| 16 (100)      | Heavyweight fabrics-canvas, woolens, outdoor tent and quilted fabrics, denims, upholstery material (light to medium).                              |                                                                                                                                                                                                                                           |
| 18 (110)      | Heavy woolen, overcoat fabrics, upholstery fabrics, some leathers and vinyls.                                                                      | Heavy duty thread, carpet thread.                                                                                                                                                                                                         |


**IMPORTANT:** Match needle size to thread size and weight of fabric.

### NEEDLE, FABRIC SELECTION

| NEEDLES      | EXPLANATION                                                            | TYPE OF FABRIC                                                                                                                                                                 |
|--------------|------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SINGER® 2020 | Standard sharp needles. Sizes range thin to large. 9 (70) to 18 (110). | Natural woven fabrics-wool, cotton, silk, etc.<br>Not recommended for double knits.                                                                                            |
| SINGER® 2045 | Semi-ball point needle, scarfed. 9 (70) to 18 (110).                   | Natural and synthetic woven fabrics, polyester blends.<br>Knits-polyesters, interlocks, tricot, single and double knits. Also sweater knits, Lycra®, swimsuit fabric, elastic. |
| SINGER® 2032 | Leather needles. 12 (80) to 18 (110).                                  | Leather, vinyl, upholstery.<br>(Leaves smaller hole than standard large needle.)                                                                                               |

**Note :**

1. For best sewing results always use genuine SINGER® needles.
2. Replace needle often (approximately every other garment ) and/ or at first thread breakage or skipped stitches.

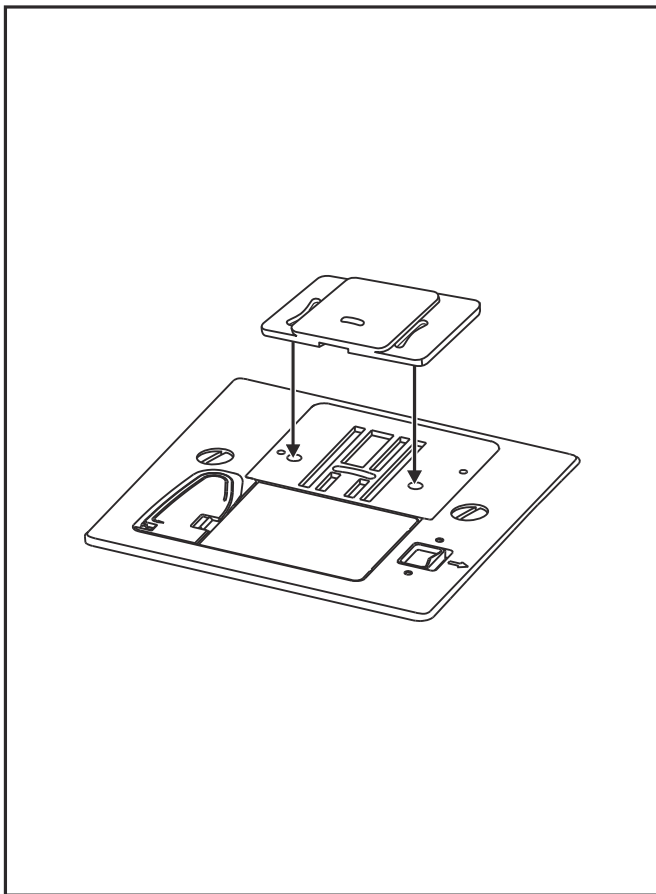

## □ Darning plate



---

For certain types of work, (e.g. darning or free-hand embroidery), the darning plate must be used.

Install the darning plate as illustrated.

For normal sewing, remove the darning plate.

For free-motion sewing it is recommended to use a darning/embroidery foot, available as an optional accessory from SINGER® retailers.

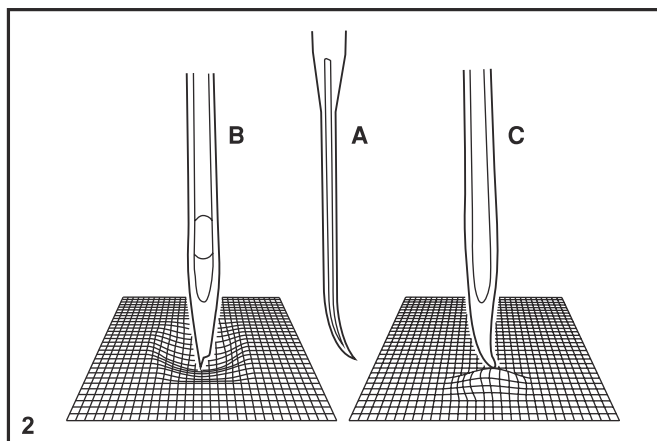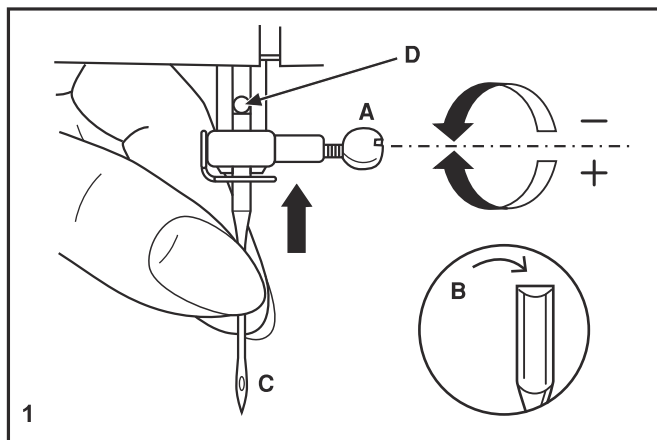

## □ Inserting the needle

Change the needle regularly, especially if it is showing signs of wear and causing problems. For best sewing results always use SINGER® Brand Needles.

Insert the needle as illustrated as follows:

- A. Loosen the needle clamp screw and tighten again after inserting the new needle. (1)
- B. The flat side of the shaft should be towards the back.
- C/D. Insert the needle as far up as it will go.

### **Attention:**







Turn power switch to off ("O") before inserting or removing the needle.

Needles must be in perfect condition. (2)

Problems can occur with:

- A. Bent needles
- B. Damaged points
- C. Blunt needles



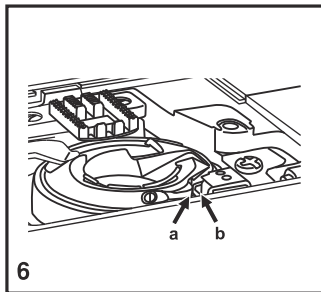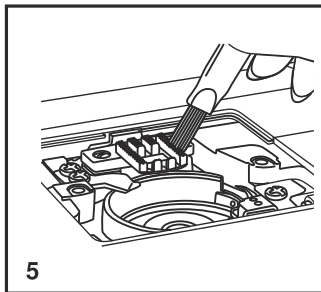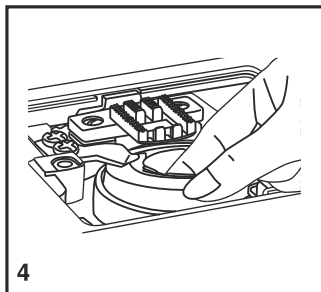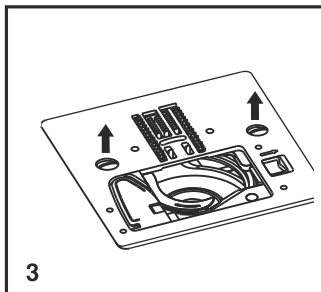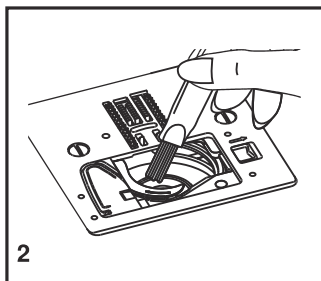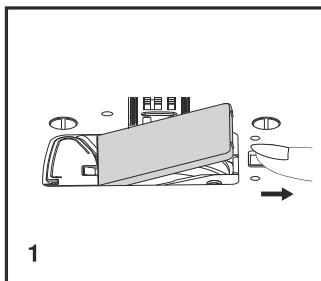

## □ Cleaning the Feed Teeth and Hook Area

If lint and bits of thread accumulate in the hook, this will interfere with the smooth operation of the machine.

Check regularly and clean the stitching mechanism when necessary.

### **Attention:**

Disconnect the machine from the wall outlet before carrying out any maintenance.

1. Remove the bobbin cover plate and bobbin.
2. Clean the bobbin holder with a brush.
3. Remove the needle, presser foot and presser foot holder. Remove the screw holding the needle plate and remove the needle plate.
4. Lift up the bobbin case and remove it.
5. Clean the hook race, feed dog and bobbin case with a brush. Also clean them, using a soft, dry cloth.
6. Replace the bobbin case into the hook race so that the tip (a) fits to the stopper (b) as shown.


## Troubleshooting Guide

| Problem                      | Cause                                                                                                                                                                                                                                                                                                                                   | Correction                                                                                                                                                                                                                                                                                                                    |
|------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Upper thread breaks          | <ol style="list-style-type: none"><li>1. The machine is not threaded correctly.</li><li>2. The thread tension is too tight.</li><li>3. The thread is too thick for the needle.</li><li>4. The needle is not inserted correctly.</li><li>5. The thread is wound around the spool holder pin.</li><li>6. The needle is damaged.</li></ol> | <ol style="list-style-type: none"><li>1. Rethread the machine.</li><li>2. Reduce the thread tension. (lower number)</li><li>3. Select a larger needle.</li><li>4. Remove and reinsert the needle. (flat side towards the back)</li><li>5. Remove the reel and wind thread onto reel.</li><li>6. Replace the needle.</li></ol> |
| Skipped stitches             | <ol style="list-style-type: none"><li>1. The needle is not inserted correctly.</li><li>2. The needle is damaged.</li><li>3. The wrong size or type of needle has been used.</li><li>4. The foot is not attached correctly.</li></ol>                                                                                                    | <ol style="list-style-type: none"><li>1. Remove and reinsert needle. (flat side towards the back)</li><li>2. Insert a new needle.</li><li>3. Choose a needle to suit the thread and fabric.</li><li>4. Check and attach correctly.</li></ol>                                                                                  |
| Needle breaks                | <ol style="list-style-type: none"><li>1. The needle is damaged.</li><li>2. The needle is not correctly inserted.</li><li>3. Wrong needle size for the fabric.</li><li>4. The wrong foot is attached.</li></ol>                                                                                                                          | <ol style="list-style-type: none"><li>1. Insert a new needle.</li><li>2. Insert the needle correctly. (flat side towards the back)</li><li>3. Choose a needle to suit the thread and fabric.</li><li>4. Select the correct foot.</li></ol>                                                                                    |
| Loose stitches               | <ol style="list-style-type: none"><li>1. The machine is not correctly threaded.</li><li>2. The bobbin case is not correctly threaded.</li><li>3. Needle/ fabric/ thread combination is wrong.</li><li>4. Thread tension wrong.</li></ol>                                                                                                | <ol style="list-style-type: none"><li>1. Check the threading.</li><li>2. Thread the bobbin case as illustrated.</li><li>3. The needle size must suit the fabric and thread.</li><li>4. Correct the thread tension.</li></ol>                                                                                                  |
| Seams gather or pucker       | <ol style="list-style-type: none"><li>1. The needle is too thick for the fabric.</li><li>2. The stitch length is incorrectly adjusted.</li><li>3. The thread tension is too tight.</li></ol>                                                                                                                                            | <ol style="list-style-type: none"><li>1. Select a finer needle.</li><li>2. Readjust the stitch length.</li><li>3. Loosen the thread tension.</li></ol>                                                                                                                                                                        |
| Uneven stitches, uneven feed | <ol style="list-style-type: none"><li>1. Poor quality thread.</li><li>2. The bobbin case is incorrectly threaded.</li><li>3. Fabric has been pulled.</li></ol>                                                                                                                                                                          | <ol style="list-style-type: none"><li>1. Select a better quality thread.</li><li>2. Remove bobbin case, thread and insert correctly.</li><li>3. Do not pull on the fabric while sewing, let it be drawn through by the machine.</li></ol>                                                                                     |
| The machine is noisy         | <ol style="list-style-type: none"><li>1. Lint or oil have collected on the hook or needlebar.</li><li>2. The needle is damaged.</li></ol>                                                                                                                                                                                               | <ol style="list-style-type: none"><li>1. Clean the hook and feed dog as described.</li><li>2. Replace the needle.</li></ol>                                                                                                                                                                                                   |
| The machine jams             | Thread is caught in the hook.                                                                                                                                                                                                                                                                                                           | Remove the upper thread and bobbin case, turn the handwheel backwards and forwards by hand and remove the thread.                                                                                                                                                                                                             |



Please note that on disposal, this product must be safely recycled in accordance with relevant National legislation relating to electrical/electronic products. Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. When replacing old appliances with new ones, the retailer may be legally obligated to take back your old appliance for disposal free of charge.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.



### **Pembuangan yang Benar untuk produk ini!**

Tanda ini menunjukkan bahwa produk ini tidak boleh dibuang bersama sampah rumah tangga lainnya di seluruh Uni Eropa. Untuk mencegah kemungkinan bahaya terhadap lingkungan atau kesehatan manusia akibat pembuangan sampah yang tidak terkontrol, daur ulang secara bertanggung jawab untuk meningkatkan penggunaan ulang berkelanjutan sumber daya material. Untuk kembali perangkat digunakan, gunakan kembali dan sistem pengumpulan atau hubungi pengecer dimana produk tersebut dibeli. Mereka dapat mengambil produk ini untuk daur ulang yang aman lingkungan.







| Masalah                         | Penyebab                                                                                                                                                                                                                                                                                                                              | Solusi                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Benang atas putus               | <ol style="list-style-type: none"> <li>1. Benang tidak terpasang dengan benar.</li> <li>2. Tingkat keketaan benang terlalu tinggi.</li> <li>3. Benang terlalu tebal untuk dimasukkan ke jarum.</li> <li>4. Jarum tidak terpasang dengan benar.</li> <li>5. Benang terilit di tiang kumparan spul.</li> <li>6. Jarum rusak.</li> </ol> | <ol style="list-style-type: none"> <li>1. Pasang ulang benang.</li> <li>2. Kurangi keketaan benang. (putar ke indicator angka yang lebih kecil)</li> <li>3. Gunakan jarum yang lebih besar.</li> <li>4. Lepas dan pasang ulang jarum. (sisi rata menghadap belakang)</li> <li>5. Gulung ulang benangnya.</li> <li>6. Ganti jarum.</li> </ol> |
| Jahitan loncat                  | <ol style="list-style-type: none"> <li>1. Jarum tidak terpasang dengan benar.</li> <li>2. Jarum rusak.</li> <li>3. Ukuran jarum tidak sesuai.</li> <li>4. Sepatu tidak terpasang dengan benar.</li> </ol>                                                                                                                             | <ol style="list-style-type: none"> <li>1. Lepas dan pasang jarum kembali. (sisi rata menghadap belakang)</li> <li>2. Pasang jarum baru.</li> <li>3. Pilih jarum yang sesuai dengan kain dan benang.</li> <li>4. Periksa dan pasang dengan benar.</li> </ol>                                                                                  |
| Jarum patah                     | <ol style="list-style-type: none"> <li>1. Jarum rusak.</li> <li>2. Jarum tidak terpasang dengan benar.</li> <li>3. Ukuran jarum tidak sesuai dengan kain yang digunakan.</li> <li>4. Sepatu tidak sesuai untuk jenis jahitan.</li> </ol>                                                                                              | <ol style="list-style-type: none"> <li>1. Pasang jarum baru.</li> <li>2. Pasang jarum dengan benar. (sisi rata menghadap belakang)</li> <li>3. Ukuran jarum harus sesuai dengan kain dan benang.</li> <li>4. Pilih jenis sepatu yang sesuai.</li> </ol>                                                                                      |
| Jahitan renggang                | <ol style="list-style-type: none"> <li>1. Benang tidak terpasang dengan benar.</li> <li>2. Kesalahan pasang benang pada sekoçi.</li> <li>3. Antara jarum/kain dan benang tidak sesuai.</li> <li>4. Salah atur keketaan benang.</li> </ol>                                                                                             | <ol style="list-style-type: none"> <li>1. Periksa alur benang.</li> <li>2. Pasang ulang benang pada sekoçi.</li> <li>3. Ukuran jarum harus sesuai dengan kain dan benang.</li> <li>4. Atur ulang keketaan benang.</li> </ol>                                                                                                                 |
| Keilman menumpuk atau mengkerut | <ol style="list-style-type: none"> <li>1. Ukuran jarum terlalu besar untuk kain yang digunakan.</li> <li>2. Salah pengaturan langkah jahitan.</li> <li>3. Tingkat keketaan benang terlalu tinggi.</li> </ol>                                                                                                                          | <ol style="list-style-type: none"> <li>1. Gunakan jarum yang lebih kecil.</li> <li>2. Atur ulang langkah jahitan.</li> <li>3. Kurangi keketaan benang.</li> </ol>                                                                                                                                                                            |
| Jahitan kendur                  | <ol style="list-style-type: none"> <li>1. Benang berkualitas rendah.</li> <li>2. Kesalahan pasang benang pada sekoçi.</li> <li>3. Kain ditarik-tarik.</li> </ol>                                                                                                                                                                      | <ol style="list-style-type: none"> <li>1. Gunakan benang dengan kualitas lebih bagus.</li> <li>2. Lepas sekoçi, pasang ulang benang dan masukkan kembali.</li> <li>3. Jangan menarik kain saat menjahit, biarkan mesin yang membawanya.</li> </ol>                                                                                           |
| Mesin jahit bersuara bising     | <ol style="list-style-type: none"> <li>1. Sisa kain tirus atau minyak yang terlalu banyak menumpuk di pengait atau di batang jarum.</li> <li>2. Jarum rusak.</li> </ol>                                                                                                                                                               | <ol style="list-style-type: none"> <li>1. Bersihkan pengait dan gigi.</li> <li>2. Ganti jarum.</li> </ol>                                                                                                                                                                                                                                    |
| Mesin jahit macet               | Benang tersangkut di pengait.                                                                                                                                                                                                                                                                                                         | <p>Lepas benang atas dan penutup spul, putar roda tangan ke arah depan dan belakang menggunakan tangan dan ambil benang yang tersangkut.</p>                                                                                                                                                                                                 |

## □ Memersihkan Area Pengait dan Gigi

Jika kotoran dan sisa benang menumpuk di pengait, ini akan mengganggu kelancaran mesin.  
Periksa dan bersihkan secara teratur mekanisme jahitan bila diperlukan.

**Perhatian:**  
Cabut mesin dari stopkontak sebelum melakukan perawatan apapun.

1. Geser penutup spul dan angkat spul.
2. Bersihkanudukan spul dengan kuas.
3. Lepas jarum, sepatu penindas dan palang sepatu penindas. Lepas baut yang ada di plat jarum dan angkat plat jarum.
4. Angkat pelindung spul dan pinglikirkan.
5. Bersihkanudukan spul, gigi bawah, dan pelindung spul dengan kuas. Juga bersihkan semuanya itu dengan kain kering.
6. Pasang kembali pelindung spul kedalamudukan spul (a) sesuai dengan stopper (b) yang ditunjukkan.

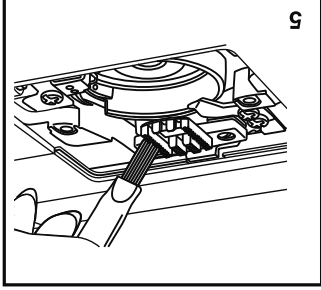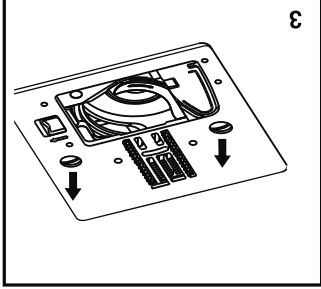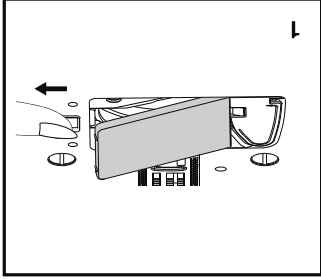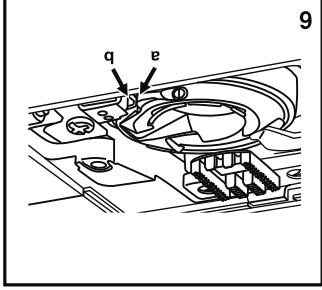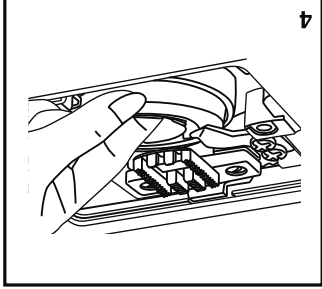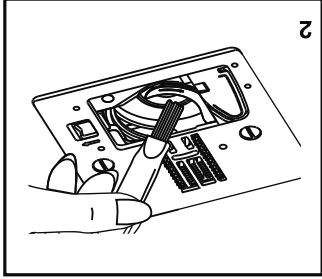

## ☐ Memasang & Menganti Jarum

Ganti jarum secara rutin, terutama jika sudah terlalu lama/ sering digunakan dan menyebabkan munculnya masalah saat menjahit. Untuk hasil jahitan terbaik selalu gunakan jarum merek SINGER®.

Pasang jarum seperti yang ditunjukkan gambar di samping.

A. Longgarkan sekrup penjepit dan kencangkan kembali setelah jarum terpasang. (1)

B. Sisi rata jarum harus menghadap ke belakang.

C/D. Dorong jarum ke atas sejauh mungkin.

### Perhatian:

Matikan mesin saat memasang atau melepas jarum.



Jarum harus dalam kondisi sempurna. (2)

Masalah dapat muncul karena:

A. Jarumnya bengkok

B. Ujung jarum rusak

C. Jarum tumpul

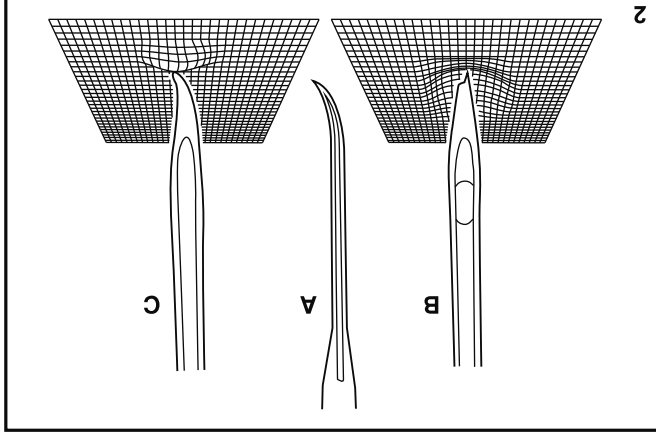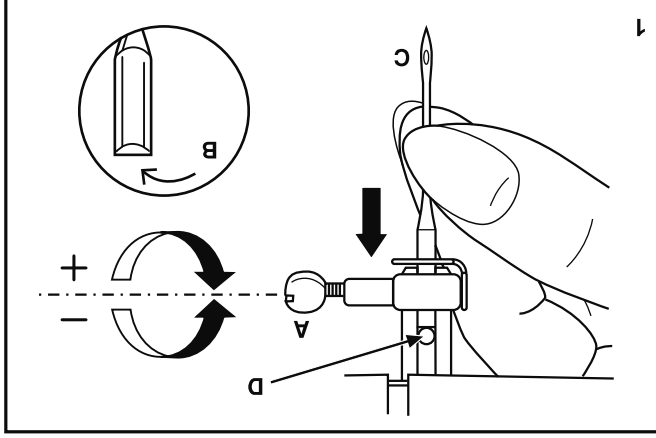


## ☐ Plat Tisik

Untuk jenis jahitan tertentu (seperti: menisik (menambal) atau membordir), plat menisik harus digunakan.

Pasang sepatu tistik seperti panduan gambar di samping.

Untuk menjahit biasa, lepas plat tistik.

Untuk menjahit bebas, disarankan menggunakan plat tistik/sepatu bordir, tersedia sebagai bagian dari aksesoris tambahan yang bisa diperoleh dari penjual jahit SINGER®.

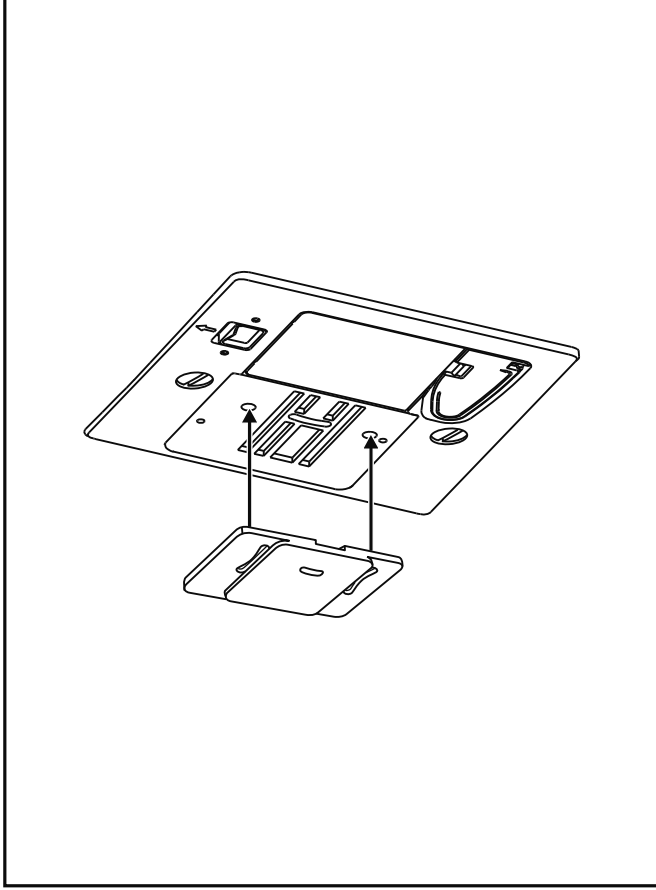



☐ Tabel Benang / Kain / Jarum

**PANDUAN PEMILIHAN BENANG, KAIN DAN JARUM**

| UKURAN JARUM  | JENIS KAIN                                                                                                                               | JENIS BENANG                                                                                                                                                                                                  |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 9-11 (70-80)  | Kain ringan-katun tipis, voile, sutra, muslin interlocks, katun rajutan, tricot, jerseys, crepes, woven polyester, kain kemeja & blouse. | Benang ringan untuk katun, nylon, polyester atau katun polyester.                                                                                                                                             |
| 11-14 (80-90) | Kain medium-katun, satin, kettiecloth, sailcloth, double knits, wol ringan.                                                              | Rata-rata benang yang tersedia untuk jenis kain dan jarum ini tersedia dalam ukuran medium. Untuk hasil terbaik gunakan benang polyester untuk bahan-bahan sintesis dan gunakan katun untuk kain tenun alami. |
| 14 (90)       | Kain medium-cotton duck, wol, rajutan berat, terrycloth, drill.                                                                          |                                                                                                                                                                                                               |
| 16 (100)      | Kain berat-kanvas, wol, kain rajutan dan terpal, drill, bahan upholstery (ringan ke medium).                                             |                                                                                                                                                                                                               |
| 18 (110)      | Wool berat, kain overcoat, kain upholstery, beberapa jenis kulit dan vinyl.                                                              | Benang kuat.                                                                                                                                                                                                  |

**PENTING:** Sesuaikan ukuran jarum dengan ukuran benang dan berat kain.

**PEMILIHAN KAIN DAN JARUM**

| UKURAN JARUM | PENJELASAN                                                             | JENIS KAIN                                                                                                                                                             |
|--------------|------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SINGER® 2020 | Standard sharp needles. Sizes range thin to large. 9 (70) to 18 (110). | Kain tenun alami-wol, katun, sutra, dan lainnya. Tidak direkomendasikan untuk rajutan ganda.                                                                           |
| SINGER® 2045 | Jadaram ujung semi tumpul, terbrat. 9 (70) ke 18 (110).                | Kain tenun alami dan sintetis, polyester blends. Rajutan sweater, interlocks, tricot, rajutan tunggal dan ganda. Rajutan sweater, Lycra, kain pakaian renang, elastic. |
| SINGER® 2032 | Jarum untuk bahan kulit. 12 (80) ke 18 (110).                          | Kulit, vinyl, upholstery. (Bekas lubang lebih kecil daripada jarum besar standar.)                                                                                     |

**Catatan:**

1. Untuk hasil jahitan yang terbaik gunakan jarum SINGER®.
2. Lakukan penggantian jarum secara rutin dan/atau saat terjadi benang lepas atau munculnya jahitan yang terlewat.

## ☐ Memasang Palang Sepatu Penindas





**Melepas sepatu penindas**  
Dorong sepatu penindas (e) ke depan untuk melepaskannya (c). (1)

**Memasang sepatu penindas**  
Pasang pin (d) sepatu penindas (e) pada bagian bawah (c) tuas sepatu penindas. (2)

**Melepas dan Memasang Palang Sepatu Penindas**  
Naikkan gagang sepatu penindas (a) dengan tuas sepatu penindas.  
Dorong dan cabut palang sepatu penindas (b) sesuai gambar. (3)

**Memasang siku/pengantar quil**  
Pasang siku/pengantar quil (g) pada lubang seperti ditunjukkan pada gambar. Sesuaikan seperunya untuk kelim, lipatan, quilting, dan lain-lain. (4)



**Perhatian:**  
Putar saklar listrik ke mati ("O") ketika melakukan semua operasi diatas!

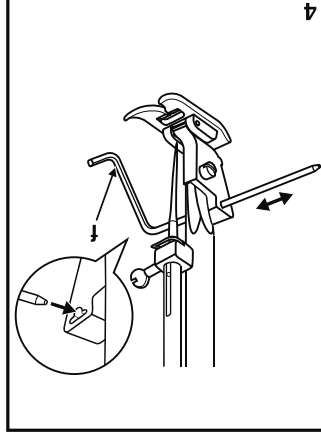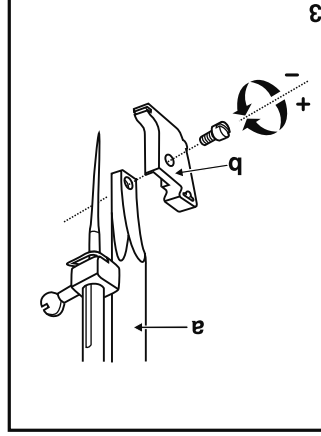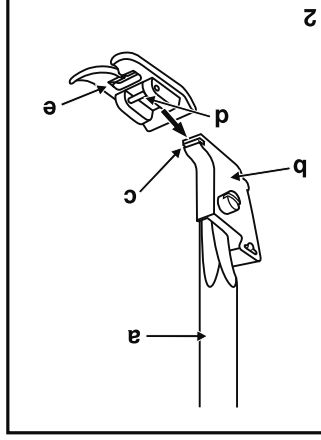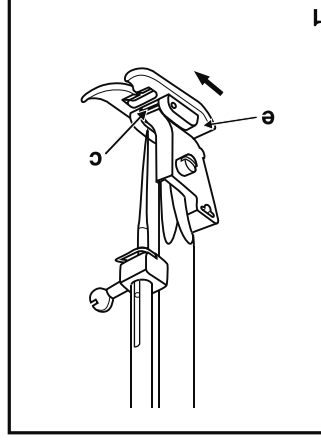

## ☐ Memasang Meja Perpanjangan

Pegang meja perpanjangan secara horizontal, dan dorong kearah panah. (1)

Untuk melepas meja perpanjangan, tarik ke kiri.

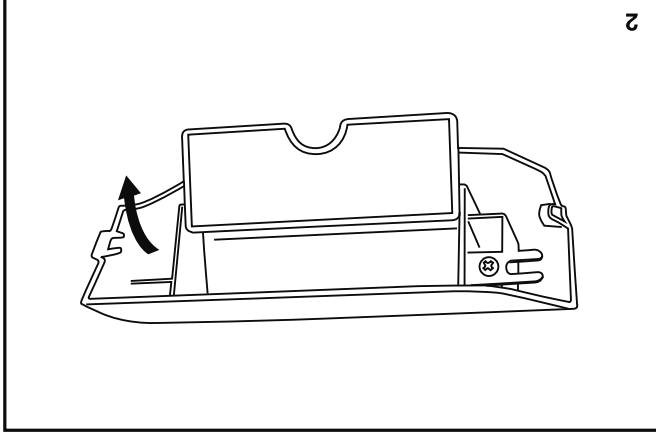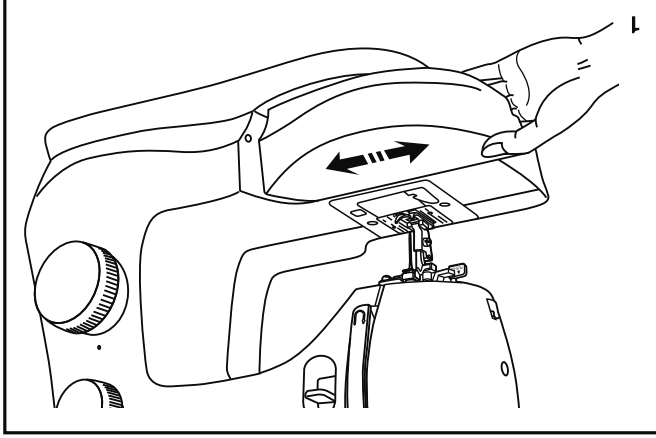

Bagian dalam meja perpanjangan dapat digunakan sebagai kotak aksesoris.

Untuk membuka, balikkan tutup kebawah seperti ditunjukkan pada gambar. (2)

## ☐ Menjahit Kancing

Pasang plat tisik. (1)  
Ganti tombol pengatur panjang menjadi pasang kancing. (2)  
Putar tombol pengatur langkah jahitan ke indikator "0".


Tempatkan tombol dan kain di bawah sepatu jahit, seperti yang di gambarkan pada gambar. (3)

Atur mesin untuk jahitan zig-zag, kemudian atur lebar ke nomor "3" - "6". Putar roda tangan untuk memeriksa bahwa jarum berjalan bersih ke dalam lubang kiri dan kanan.

Sesuaikan lebar jahitan yang diperlukan, sesuai dengan jarak lubang yang diinginkan. Jahit sebanyak 10 jahitan pertama.

Angkat jarum keluar dari kain. Atur mesin untuk menjait lurus lagi, kemudian jahit beberapa jahitan untuk menyelesaikan.

Jika diperlukan palang, pasang jarum tisik di atas kancingdan menjahitlah. (4) Untuk kancing dengan 4 lubang,menjahitlah diatas dua lubang depan dahulu, dorong kain ke depan dan kemudian menjahit diatas dua lubang belakang.

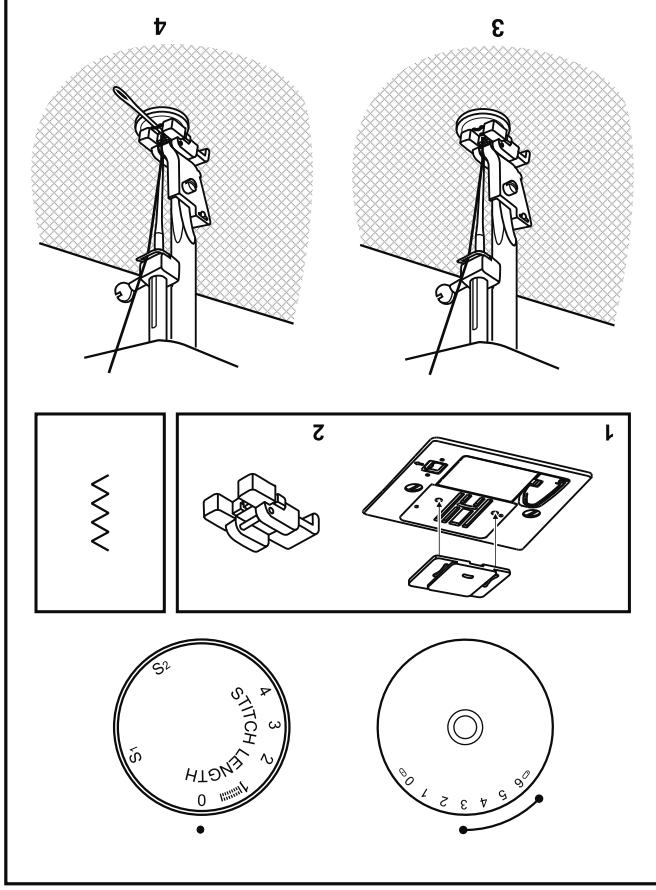

## □ Menjahit Lubang Kancing 1 Langkah


**Menjahit lubang kancing adalah proses yang mudah dengan hasil yang bagus serta kuat. Namun, disarankan untuk berlatih menjahit lubang kancing pada kain dan stabilizer (kain keras) secara rutin.**

### **Membuat sebuah lubang kancing**

1. Gunakan kapur jahit untuk menandai posisi lubang kancing di kain.
2. Pasang sepatu lubang kancing dan putar tombol pengatur ke simbol " " . Kemudian, putar tombol pengatur langkah jahitan ke simbol " " . Putar tombol pengatur ke indikator angka "6". Namun lebarnya tetap harus disesuaikan, oleh karenanya lakukan uji coba terlebih dahulu.
3. Turunkan sepatu penindas tepat di atas tanda yang tadi dibuat pada kain (A). (Bagian depan akan dijahit terlebih dahulu.) (Sejajarkan tanda pada kain (a) dengan tanda pada sepatu (b).)
4. Buka plat kancing dan masukkan kancing. (B)
5. Turunkan tuas lubang kancing dan dorong kembali perlahan. (C)
6. Pegang benang atas dengan lembut, nyatakan mesinnya.
7. Menjahit lubang kancing telah selesai. (D)
8. Hentikan proses mesin ketika siklus menjahit lubang kancing selesai.

### **Membuat sebuah lubang kancing pada kain stretch (E)**

- Ketika menjahit lubang kancing pada kain stretch, ambilah benang berat di bawah sepatu lubang kancing. Ketika lubang kancing telah terjahit maka secara otomatis benang tadi juga ikut terjahit.
1. Tandai posisi penempatan lubang kancing pada kain dengan kapur, pasang sepatu lubang kancing, dan putar tombol pengatur lalu pilih simbol " " . Putar tombol pengatur langkah jahitan ke simbol " " .
  2. Pasang/kaitkan benang berat ke sisi belakang sepatu lubang kancing, lalu tarik kedua ujung benang berat tadi ke arah sisi depan sepatu, masukkan ke alur jahitan dan ikat sementara.
  3. Turunkan sepatu penindas dan mulai menjahit.
  4. Saat menjahit selesai, tarik benang berat secara perlahan agar tidak kendur, lalu potong sisa benang.

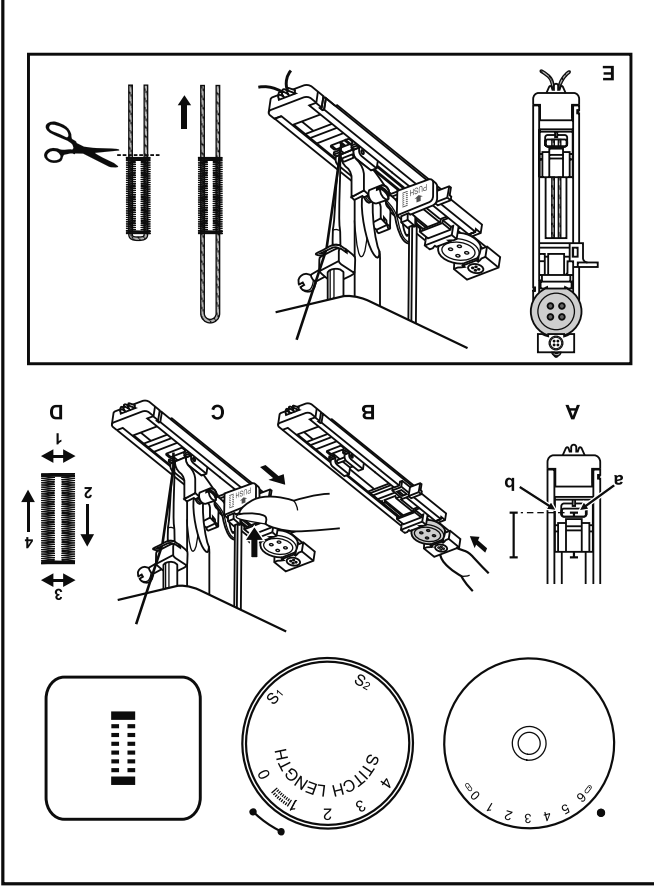

## ☐ Obras Buta (sum)

Jahitan ini digunakan untuk mengobras tirai, celana, rok, dan lainnya.

..... Obras buta untuk kain stretch.

..... Obras buta untuk kain kuat.

Putar tombol pengatur langkah jahitan dengan kisaran pilihan seperti yang terlihat pada diagram di kanan. Obras buta, adalah jenis jahitan biasa dengan langkah jahitan lebih panjang. Atur dan sesuaikan lebar jahitan sesuai dengan jenis/berat kain yang digunakan. Jahitan yang lebih rapat digunakan untuk jenis kain ringan, sedangkan untuk kain berat menggunakan jenis jahitan renggang. Lakukan uji coba dahulu untuk memastikan pengaturan mesin jahit sesuai dengan kain yang digunakan.

Obras Buta (sum):

Ubah sesuaikan obras buta sesuai dengan lebar dan lipatan yang diinginkan. Lipat (lihat gambar 1) tepi kain dengan ukuran sekitar 7 mm (1/4").


Mulailah menjahit perlahan di atas lipatan, pastikan jarum menyentuh bagian atas dan mengambil satu atau dua

benang kain. (2)

Buka lipatan ketika selesai mengobras buta.

### Catatan:

Untuk mengobras buta dengan mudah, gunakan sepatu obras buta, tersedia di penjual mesin jahit SINGER®.


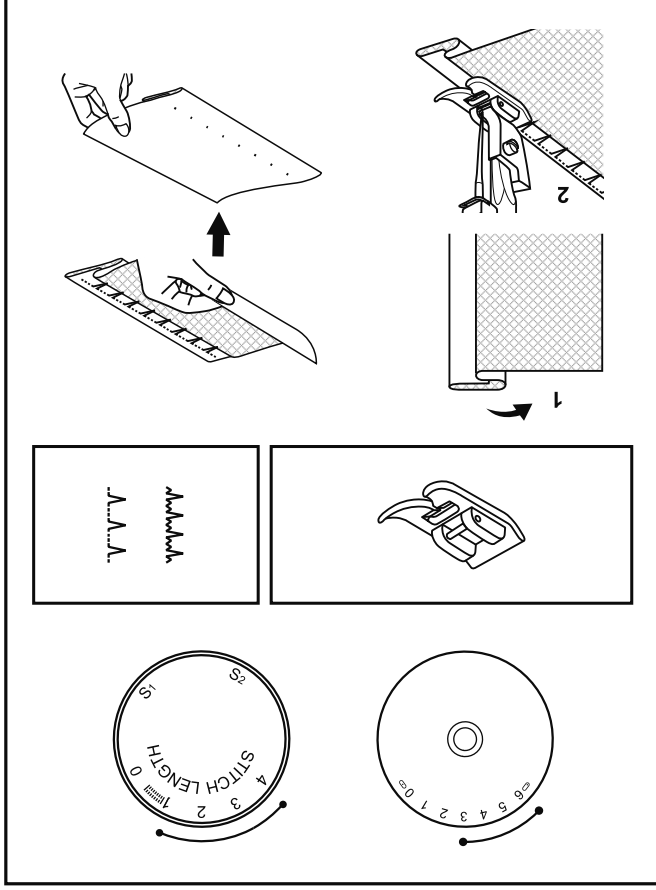


## ☐ Memilih Jenis Jahitan Lurus

Pola jahitan lurus ditandai dengan warna biru dan merah pada tombol pengatur pola jahitan.  
Untuk memilih jenis jahitan ini, putar tombol pengaturan ke jenis jahitan yang diinginkan. Kemudian putar tombol ke indikator "S1" atau "S2". Berikut ini ada dua contoh yang bisa diambil:

### Jahitan Stretch Lurus (1)


Putar tombol dan pilih simbol "||||".  
Keleman dijahit dengan tiga kali jahitan untuk mendapatkan hasil yang bagus.  
Mesin akan menjahit dua jahitan maju dan satu jahitan mundur.

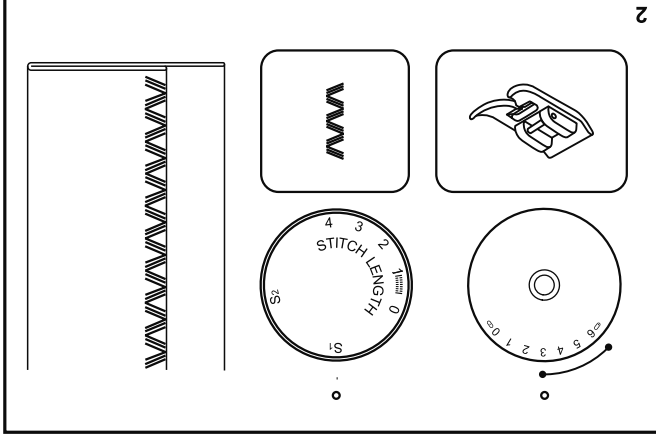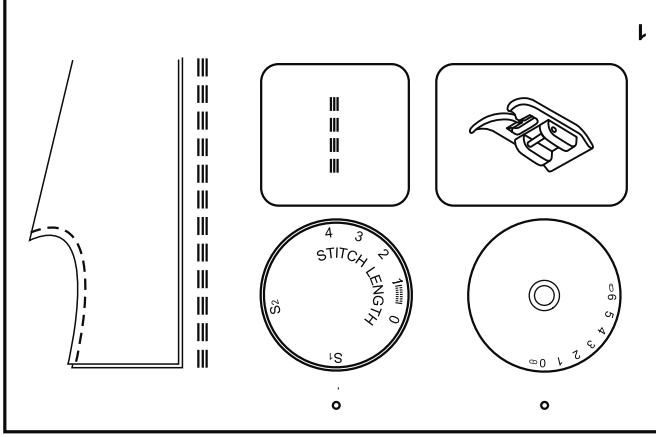

### Ric Rac (2)

Putar tombol dan pilih simbol "~~~~".

Putar dan ubah sesuaikan lebar jahitan dengan indicator angka antara "3" dan "6".  
Jahitan ric rac cocok untuk digunakan pada jenis kain kuat seperti kain drill, corduroy, poplin, duck, dan lainnya.

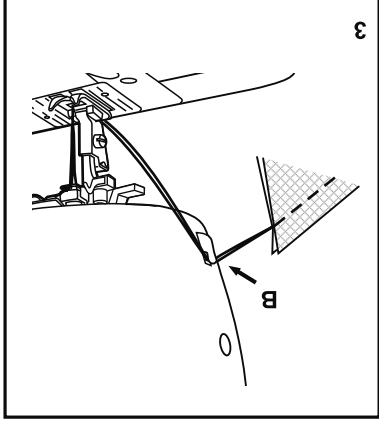

Untuk memperkuat awal dan akhir kelim, tekan tuas menjahit mundur beberapa (A). Jahitlah beberapa jahitan mundur. Lepaskan tuas dan mesin akan menjahit maju kembali. (1)



Putar roda tangan kearah anda (berlawanan arah jarum jam) agar tuas pengencang benang naik ke posisi paling tinggi, naikkan sepatu penindas dan keluarkan kain di belakang jarum dan sepatu penindas. (2)

Tarik benang di bawah dan di belakang sepatu penindas. Antar benang ke samping plat depan dan memasuki pemotong benang (B). Tarik benang kebawah untuk memotong. (3)



## ☐ Menjahit Jahitan Lurus

- Untuk mulai menjahit, atur mesin ke opsi menjahit lurus. (1)
- Letakkan kain di bawah sepatu penindas. Tepian kain telah dikelim sebelumnya. (2)
- Turunkan tuas sepatu penindas, dan kemudian mulai menjahit. (3)

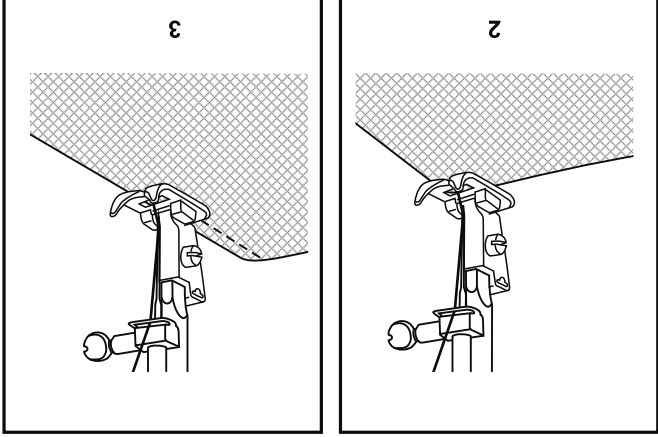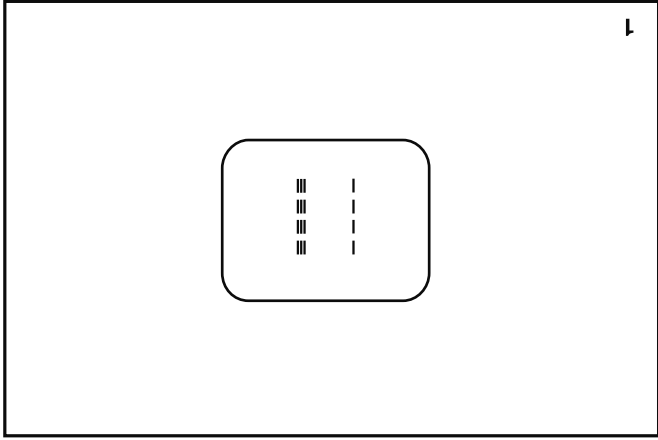

## □ Tombol Panjang & Lebar Jahitan

Lebar maksimum jahitan zig-zag saat menjahit zig-zag adalah 6 mm; tapi, lebar tersebut dapat dikurangi untuk segala jenis jahitan. Lebar jahitan bertambah ketika tombol pengatur diputar dari indikator angka "0" sampai "6". (1)

Tombol lebar jahitan juga berfungsi sebagai pengatur posisi jarum menjahit lurus. "0" adalah posisi jarum tengah, sedangkan "6" adalah posisi jarum kiri terjauh.

### Fungsi tombol pengatur lebar jahitan saat menjahit zig-zag



Atur tombol pengatur jenis jahitan dan pilih opsi zig-zag. Tingkat kerapatan jahitan zig-zag semakin bertambah ketika tombol pengatur langkah jahitan diubah sesuaikan hingga ke indikator angka "0".

Untuk mendapatkan jahitan zig-zag yang bagus/rapat, tombol pengatur diubah sesuaikan ke indikator angka "3" atau di bawahnya. (2)

Untuk jahitan zig-zag rapat disebut dengan jahitan satin. (2)

### Fungsi tombol langkah jahitan ketika menjahit lurus

Untuk menjahit jahitan lurus, putar tombol pengatur jenis jahitan pengaturan jahitan lurus. Putar tombol pengatur langkah jahitan, dan langkah jahitan akan berkurang saat tombol diputar mendekati indikator angka "0". Langkah jahitan akan bertambah saat tombol diputar mencapai indikator angka "4". Bila hendak menjahit kain tebal atau menggunakan jarum atau benang yang lebih tebal, tambahkan langkah jahitan. Sebaliknya, langkah jahitan dikurangi apabila menjahit dengan kain tipis dan jarum atau benang yang lebih kecil.

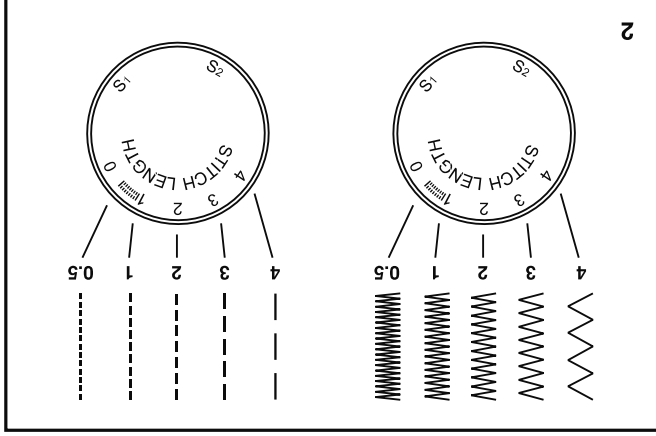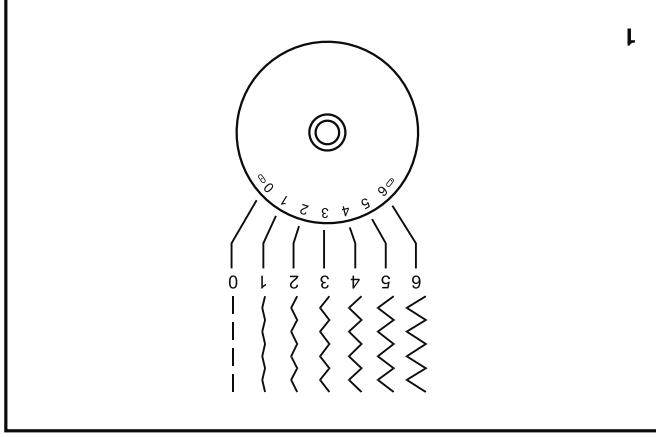

## □ Memilih Jenis Jahitan

Diagram pada halaman ini memperlihatkan pola ahitan yang tersedia pada mesin.



Jahitan dibagian atas diagram di tunjukan selector warna abu-abu. Untuk memilih pola yang di tunjukan oleh selector warna abu-abu, putar selector. (d)

Gunakan selector panjang (c) untuk menyesuaikan panjang jahitan yang diinginkan untuk suatu proyek. Gunakan selector lebar (b) untuk menyesuaikan lebar jahitan yang diinginkan.

Untuk mendapatkan jenis-jenis jahitan lainnya, putar tombol pengatur panjang jahitan ke "S1" atau "S2" dan pilih jenis jahitan yang diinginkan dengan tombol pengatur jenis jahitan.

Cakram Angka Selektor Pola bisa diputar ke kedua arah.

- Tuas menjahit mundur
- Cakram angka lebar jahitan
- Cakram angka panjang jahitan
- Cakram angka selektor pola

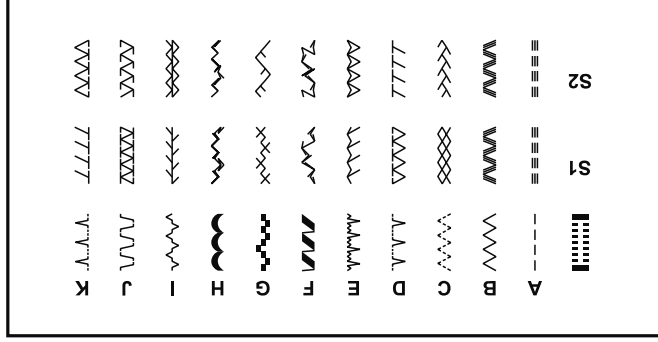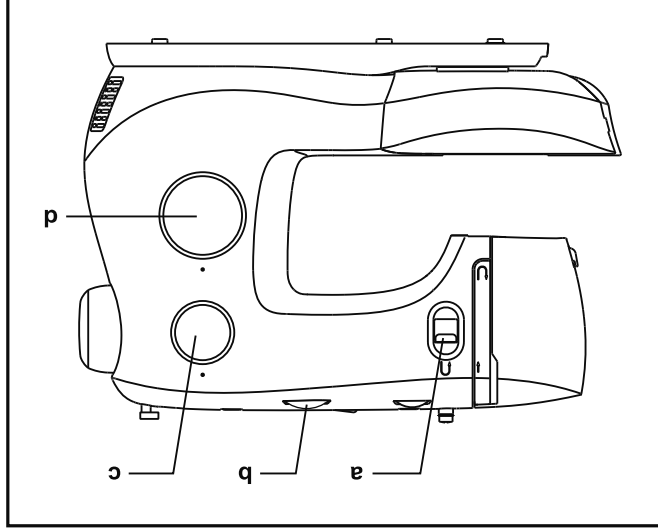

## ☐ Keketakan Benang

### Keketakan benang atas

Pengaturan keketakan benang secara default terletak pada indikator "4".

Untuk menambah tingkat keketakan benang, ubah pengaturannya ke indikator angka yang lebih besar.

Untuk mengurangi tingkat keketakan benang, ubah pengaturannya ke indikator angka yang lebih kecil.

1. Keketakan benang normal untuk jahitan lurus.

2. Jika keketakan benang terlalu rendah untuk jahitan lurus, putar tombol pengaturannya ke indikator angka yang lebih besar.






3. Jika keketakan benang terlalu tinggi untuk jahitan lurus, putar tombol pengaturannya ke indikator angka yang lebih kecil.

4. Keketakan benang normal untuk jahitan zig-zag dan dekoratif: Patokan keketakan benang yang benar adalah saat terlihatnya sejumlah benang atas di sisi bawah kain.

### Harap diperhatikan:

- Untuk mendapatkan jahitan yang bagus, atur keketakan benang dengan benar.
- Setiap fungsi jahitan, benang atau kain memiliki pengaturan keketakan yang berbeda-beda.
- Keketakan yang seimbang (jahitan atas maupun bawah sama) biasanya hanya dipertunjukkan untuk menjahit jahitan lurus.

- 90% dari semua jahitan akan terletak antara "3" dan "5".
- Untuk fungsi jahitan zig-zag dan dekoratif kurangi keketakan benangnya.
- Untuk mendapatkan jahitan dekoratif yang bagus serta kain yang tidak mengerut, benang atas harus muncul di sisi bawah kain.

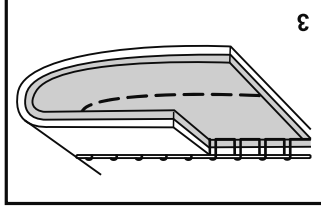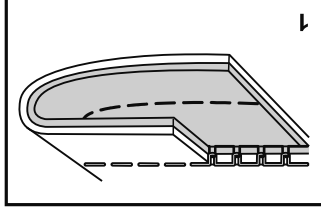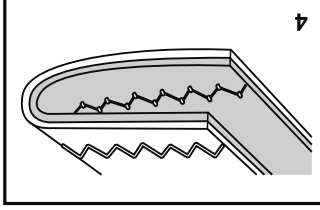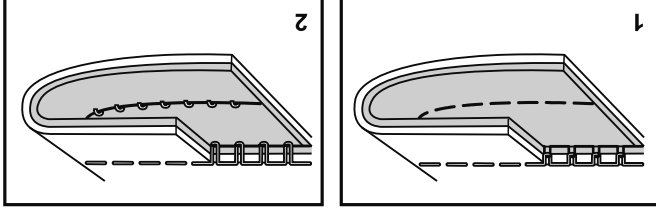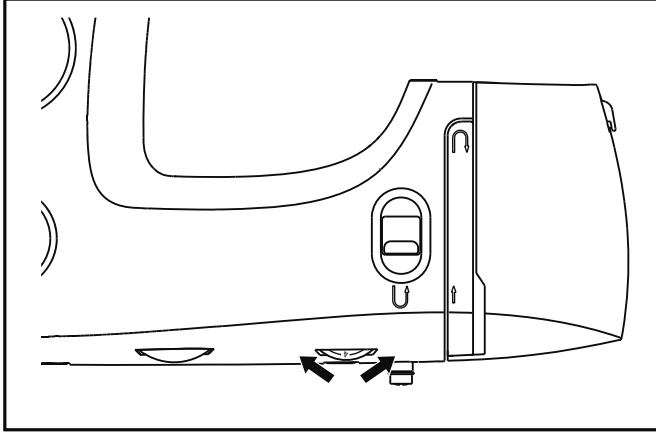

## □ Memasang Benang Spul




Pegang benang atas dengan tangan kiri. (1)

Putar roda tangan kearah anda (berlawanan arah jarum jam),  
turunkan, lalu naikkan jarum.

**Perhatian:**  
Jika benang spul sukar dinaikkan, periksalah untuk  
memastikan apakah benang tidak tersangkut di engsel  
penutup atau Meja Perpanjangan.

Pelan-pelan tarik benang atas agar benang spul naik  
melewati lubang plat jarum. (2)



Letakkan kedua jarum ke belakang di bawah sepatu  
penindas. (3)

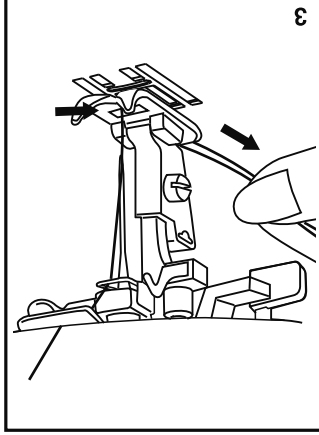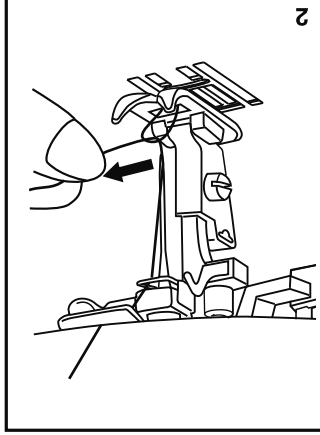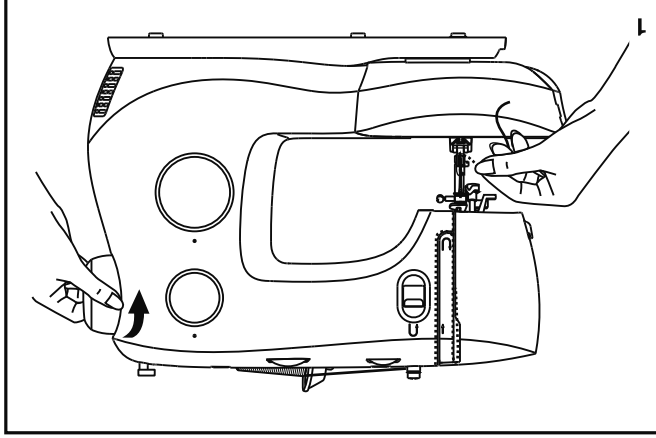

## □ Pemasang Benang Otomatis

- Naikkan jarum ke posisi paling tinggi.
- Masukkan benang disekeliling pengantar benang (A). (1)
- Tekan tuas (B) kebawah sejauh-jauhnya. (2)
- Pemasang benang akan secara otomatis mengayun ke posisi pemasangan benang (C).
- Masukkan benang di depan jarum di sekeliling pengait (D)
- Lepaskan tuas (B). (3)
- Tarik benang melewati lubang jarum.

**Perhatian:**  
Putar saklar listrik ke mati ("O")!

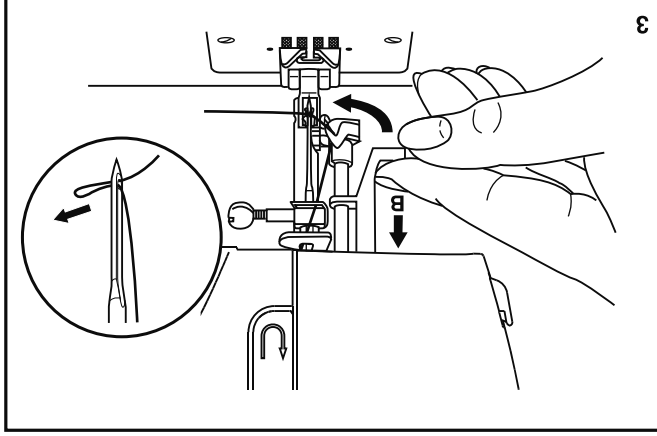
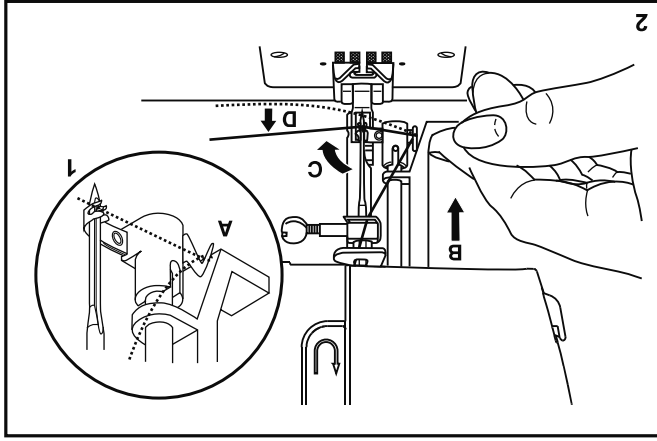


## □ Memasang Benang Atas

Ini merupakan operasi yang mudah namun penting untuk dilakukan dengan benar karena kalau tidak benar akan timbul beberapa masalah dalam menjahit:

- Mulailah dengan menaikkan jarum ke posisi tertinggi (1), dan juga naikan sepatu untuk melepaskan cakram tegangan.
- **Catatan:** Demi keamanan, sangat disarankan agar anda memutar listrik sebelum memasang benang.
- Angkat pin spul. Letakkan spul benang pada pemegang dengan benang keluar dari spul seperti ditunjukkan. Untuk spul benang kecil, letakkan sisi kecil pemegang spul di dekat spul. (2)
- Tarik benang dari spul melewati pengantar benang atas (3) dan tarik benang melewati per sebelum tegangan seperti diilustrasikan. (4)







- Pasang benang pada modul tegangan dengan membawa benang ke kanan bawah saluran dan kiri atas saluran. (5) Selama proses ini sebaiknya anda memegang benang diantara spul dan pengantar benang.
- Di puncak pergerakan ini sisipkan benang dari kanan ke kiri melalui lubang tuas pengungkit dan kemudian kebawah lagi. (6)
- Kini bawa benang melewati pengantar klem jarum kawat tipis (7) dan kemudian kebawah menuju jarum yang akan dimasuki benang dari depan ke belakang.
- Tarik kira-kira 6-8 inci benang ke belakang melewati lubang jarum. Potong benang yang terlalu panjang dengan pemotong benang yang sudah terpasang. (8)

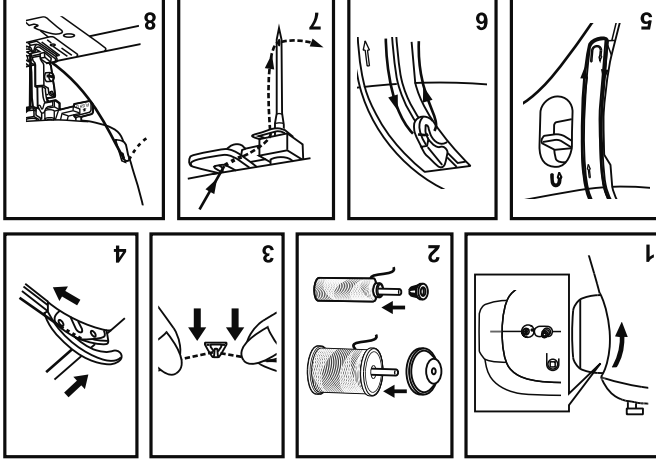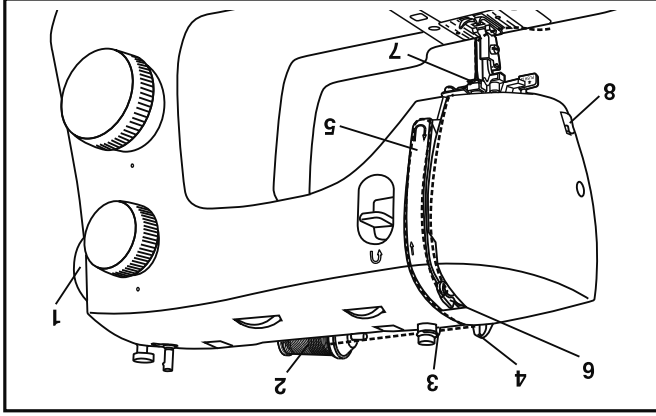

## ☐ Memasang Spul

- Pada waktu memasukkan atau mengambil spul, tuas penindas harus di angkat. (1)
- Geser penutup spul dan angkat spul. (2)
- Masukkan spul ke dalam tempatnya, dengan memasukkan spul berputar berlawanan dengan arah jarum jam (arah panah). (3)
- Tarik benang melewati celah (A). (4)
- Tahan bagian atas spul dengan jari tengah, letakkan benang sesuai dengan petunjuk yang ada. (5)
- Untuk memotong sisa benang, tarik benang ke arah anda untuk memotongnya dengan cutter pada ujung (B). Pasang kembali penutup spul. (6)

**Perhatian:**  
Putar saklar listrik ke mati ("O") sebelum memasukkan atau mengeluarkan spul.

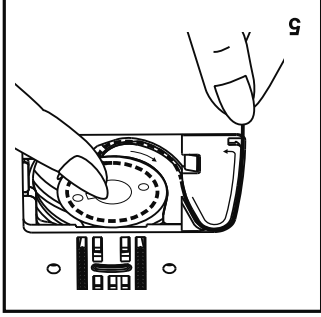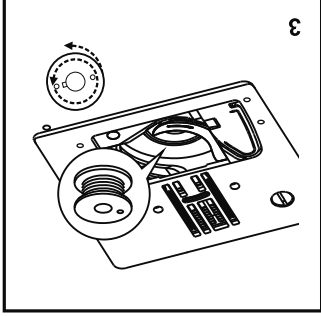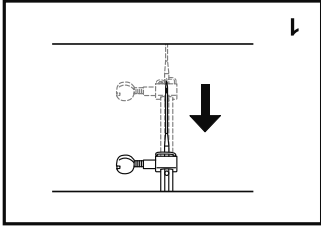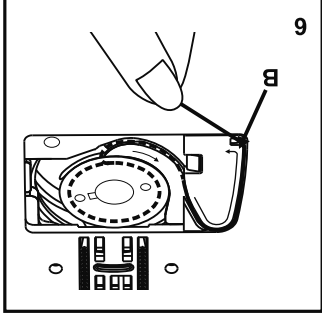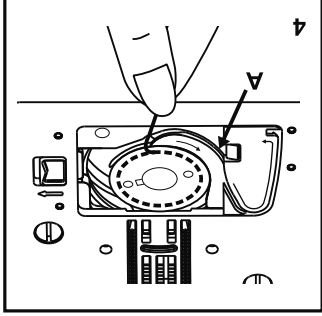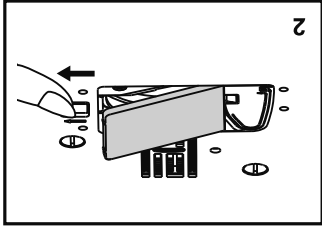





## □ Menggulung Spul

- Pasang benang dan penahan spul yang sesuai ke pasak (tiang benang). (1/2)
- Sangkutkan benang ke pengantar benang. (3)
- Gulung benang searah jarum jam dan pasang ke spindel. (4/5)
- Dorong spindel spul ke kanan. (6)
- Pegang ujung benang. (7)
- Injak pedal/trap (injakan dinamo). (8)
- Potonglah benang. (9)
- Dorong spindel benang ke kiri (10) dan lepaskan.

### Harap Perhatikan:

Jika spindel penggulung spul sedang pada posisi "menggulung spul," mesin tidak akan menjahit dan roda tangan tidak akan berputar. Untuk mulai menjahit, dorong spindel penggulung spul ke kiri (posisi menjahit).

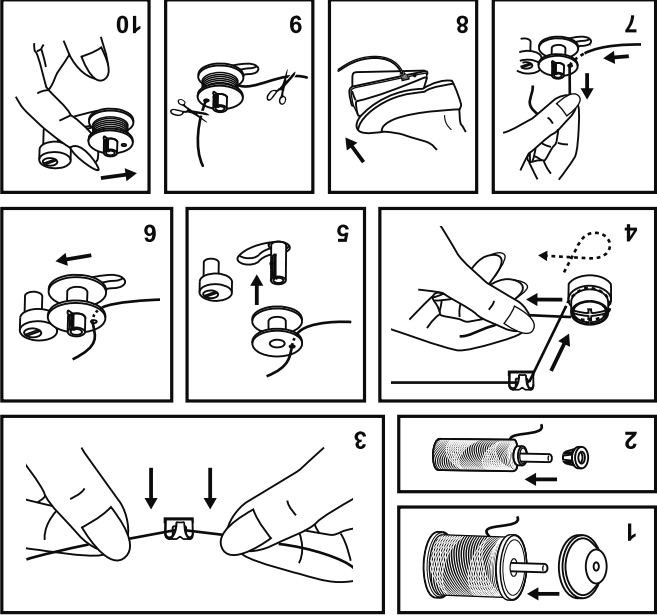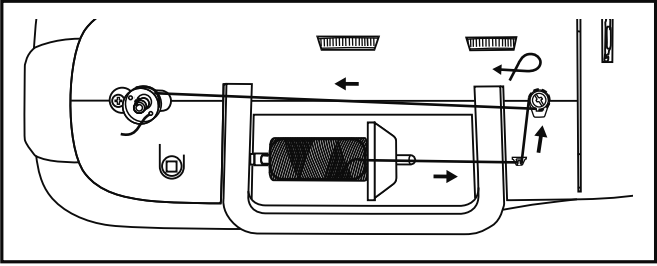


## □ Aksesoris

### Aksesoris standar

- a. Sepatu serbaguna
- b. Sepatu resleting
- c. Sepatu lubang kancing
- d. Sepatu jahit kancing
- e. Pisau kelim/sikat
- f. Pengantar kelim
- g. Kotak jarum
- h. Penggulung spul
- i. Spul (3 buah)
- j. Obeng L.
- k. Plat tisiik
- l. Pasak (tiang benang) kedua
- m. Bulu kempa pasak (tiang benang)
- n. Penutup mesin

### Aksesoris tambahan:


Untuk informasi tentang tambahan sepatu, lampiran dan aksesoris yang mungkin tersedia untuk mesin anda, kunjungi [www.singer.com](http://www.singer.com).

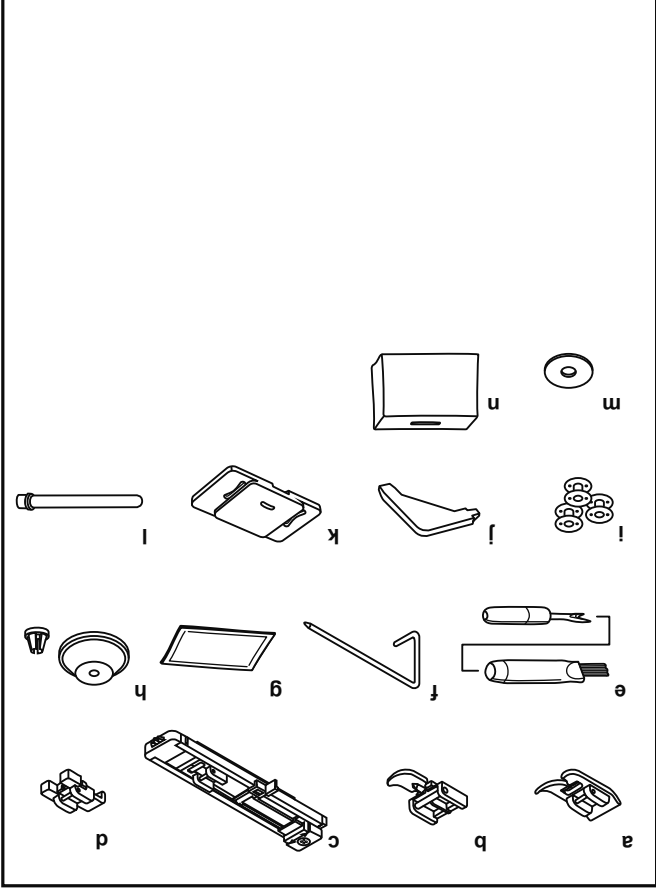

## ☐ Tuas Sepatu Penindas 2 Langkah

Ketika menjahit beberapa lapis kain tebal, sepatu penindas dapat diangkat ke posisi lebih tinggi agar kain mudah diletakkan. (A)

**Perhatian:**  
Mesin SINGER® Anda disesuaikan untuk memberikan hasil jahitan terbaik pada suhu kamar normal. Ekstrem suhu panas dan dingin dapat mempengaruhi hasil jahitan.

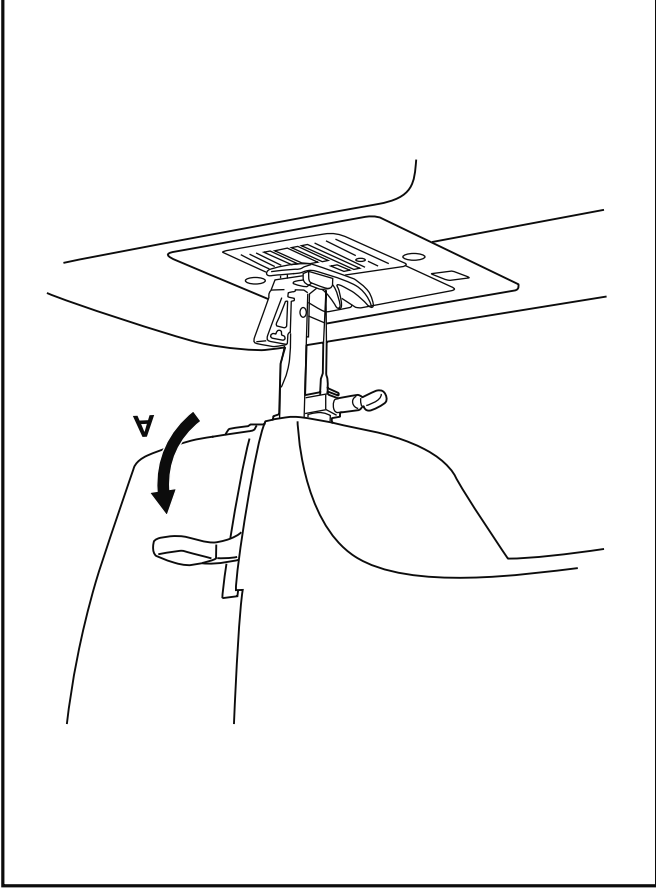

## □ Menyambungkan Mesin ke Saluran Listrik

Sambungkan mesin ke catu daya seperti ditunjukkan pada gambar. (1)

Peralatan ini dilengkapi steker kutub yang harus digunakan dengan stopkontak kutub yang tepat. (2)

**Perhatian:**  
Cabut steker listrik jika mesin tidak digunakan.

### Pedal/trap (injakan dinamo)

Pedal/trap mengatur kecepatan menjahit. (3)

#### Perhatian:

Hubungi montir listrik yang memenuhi syarat jika anda tidak mengetahui cara untuk menghubungkan mesin ke catu daya. Cabut steker listrik jika mesin tidak digunakan.  
Pedal/trap (injakan dinamo) harus digunakan dengan peralatan KD-1902, FC-1902 (110-120V) / KD-2902, FC-2902A, FC-2902D (220-240V) / 4C-316B (110-125V) / 4C-316C (127V) / 4C-326C (220V) / 4C-326G (230V) / 4C-336G (240V) / 4C-336G (220-240V).



### Lampu Menjahit

Tekan saklar utama (A) ke "I".

#### PERINGATAN PENTING


Untuk peralatan bersteker kutub (satu sudut lebih lebar dari yang lain). Untuk mengurangi risiko kejutan listrik, steker ini dimaksudkan untuk hanya cocok dengan stopkontak kutub yang benar saja. Jika steker tidak benar-benar cocok dengan stopkontak, pastikan steker. Jika masih tidak cocok, hubungi teknisi listrik yang memenuhi syarat untuk memasang stopkontak yang tepat. Jangan sekalipun mengubah steker.

- a. Steker kebel saluran listrik
- b. Stopkontak dinding

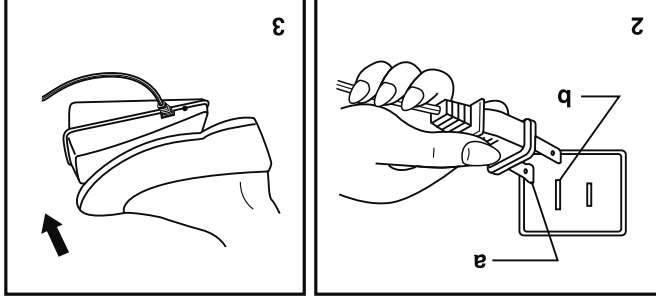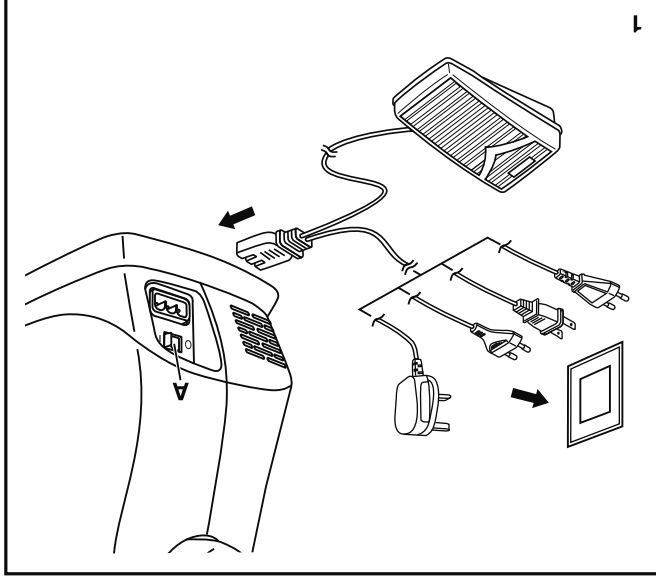

## ☐ Bagian-bagian Utama Mesin

1. Pasak (tiang benang) horizontal
2. Pengguling spul
3. Lubang pasak (tiang benang) kedua
4. Roda tangan
5. Saklar daya dan lampu
6. Soket steker utama
7. Pengantar benang spul
8. Pengantar benang atas
9. Plat muka
10. Gagang
11. Tuas sepatu
12. Pedal kontrol kecepatan
13. Kabel daya

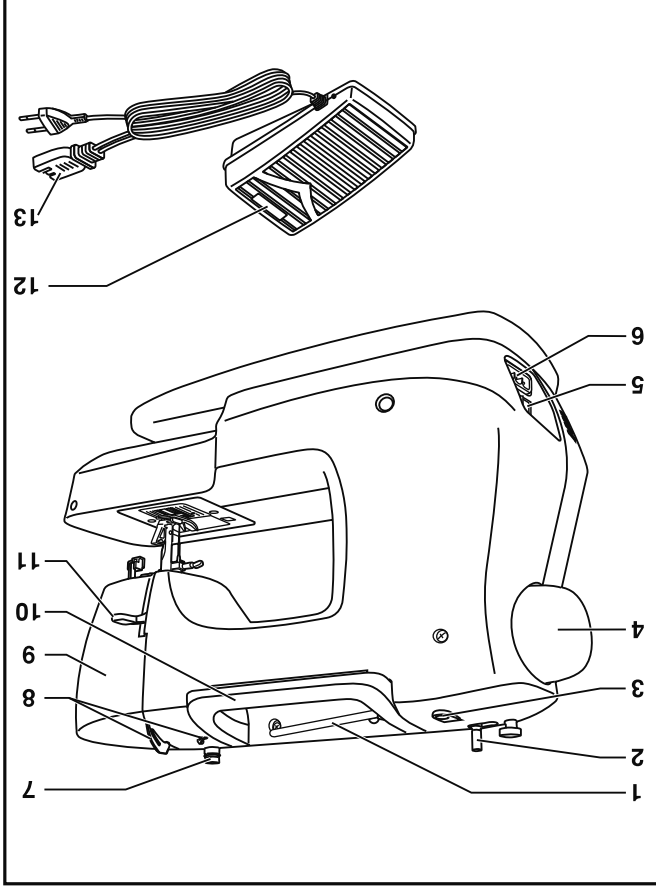


## ☐ Bagian-bagian Utama Mesin

1. Cakram tegangan benang
2. Tuas pengait benang
3. Pemotong benang
4. Sepatu
5. Plat jarum
6. Meja jahit yang bisa dilepas / tempat penyimpanan tambahan
7. Tuas jahit balik
8. Penahan spul
9. Cakram angka lebar jahitan
10. Cakram panjang jahitan
11. Cakram selektor pola
12. Tuas lubang kancing satu langkah
13. Pemasang benang otomatis

### Dikeluarkan dari kardus

- Tempatkan kardus pada permukaan yang datar dan stabil. Angkat mesin anda keluar dari kardus dan pindahkan kardusnya.
- Pindahkan semua bahan kemasan lain dan kantong plastiknya.

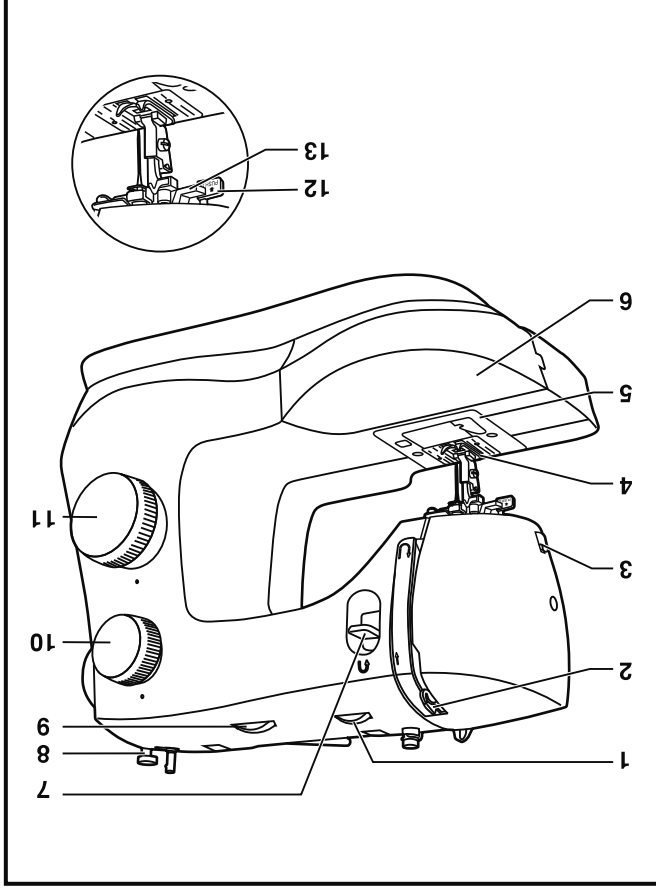

|                                                       |     |
|-------------------------------------------------------|-----|
| <b>Dasar-dasar Mesin</b>                              |     |
| Bagian-bagian Utama Mesin                             | 1-2 |
| Menyambungkan Mesin ke Saluran Listrik                | 3   |
| Tuas Sepatu Penindas 2 Langkah                        | 4   |
| Aksesoris                                             | 5   |
| <b>Memasang Benang ke Mesin</b>                       |     |
| Menggulung Spul                                       | 6   |
| Memasang Spul                                         | 7   |
| Memasang Benang Atas                                  | 8   |
| Pemasang Benang Otomatis                              | 9   |
| Memasang Benang Spul                                  | 10  |
| Keketatan Benang                                      | 11  |
| <b>Menjahit</b>                                       |     |
| Memilih Jenis Jahitan                                 | 12  |
| Tombol Panjang & Lebar Jahitan                        | 13  |
| Menjahit Jahitan Lurus                                | 14  |
| Menjahit Mundur / Mengeluarkan Kain / Memotong Benang | 15  |
| Memilih Jenis Jahitan Lurus                           | 16  |
| Obras Buta (sum)                                      | 17  |
| Memilih Jenis Jahitan Lurus                           | 17  |
| Menjahit Lubang Kancing 1 Langkah                     | 18  |
| Menjahit Kancing                                      | 19  |
| <b>Informasi Umum</b>                                 |     |
| Memasang Meja Perpanjangan                            | 20  |
| Memasang Palang Sepatu Penindas                       | 21  |
| Tabel Benang / Kain / Jarum                           | 22  |
| Plat Tisik                                            | 23  |
| <b>Perawatan dan Troubleshooting</b>                  |     |
| Memasang & Mengganti Jarum                            | 24  |
| Membersihkan Area Pengait dan Gigi                    | 25  |
| Panduan Troubleshooting                               | 26  |

## Selamat

Sebagai pemilik mesin jahit Singer baru, anda akan memulai petualangan kreativitas yang mengasyikkan. Sejak pertama kali anda menggunakan mesin jahit ini, anda akan tahu bahwa anda sedang menjahit dengan salah satu mesin jahit paling mudah digunakan yang pernah dibuat.

Kami menyarankan agar sebelum menggunakan mesin jahit ini anda melihat-lihat banyak fitur dan kemudahan penggunaan yang terdapat pada mesin jahit anda dalam buku petunjuk ini sedikit demi sedikit. Untuk memastikan anda selalu memperoleh kemampuan menjahit paling modern, produsen memberikan hak untuk mengubah tampilan, desain atau aksesoris mesin jahit ini jika dianggap perlu.

SINGER® adalah merek dagang terdaftar dari The Singer Company Limited S.à.r.l. atau afiliasinya. SINGER® adalah merek dagang terdaftar dari The Singer Company Limited S.à.r.l. atau afiliasinya. ©2016 The Singer Company Limited S.à.r.l. atau afiliasinya. Semua Hak Dilindungi.



# SIMPAN PETUNJUK INI

Produk ini hanya untuk penggunaan rumah tangga.

11. Jangan jatuhkan atau masukkan benda apapun ke lubang apapun.
12. Jangan digunakan di tempat terbuka.
13. Janganoperasikan mesin jahit bila produk aerosol (semprot) sedang digunakan atau bila oksigen sedang disalurkan.
14. Untuk memutus sambungan listrik, putar saklar ke posisi mati ("O"), kemudian cabut steker dari stopkontak.
15. Jangan cabut steker dengan menarik kabel. Untuk mencabut, pegang stekernya, bukan kabelnya.
16. Tingkat tekanan yang baik dalam kondisi operasi normal adalah 75dB(A).
17. Harap matikan mesin atau cabut steker jika mesin tidak bekerja dengan baik.
18. Jangan tetakkan pedal/trap (injakan dinamo).
19. Jika kabel listrik yang terpasang pada pedal/trap (injakan dinamo) rusak, maka kabel ini harus diganti oleh produsen atau service agent-nya atau orang yang memenuhi syarat agar tidak timbul bahaya.
20. Peralatan ini tidak dimaksudkan untuk dipakai oleh orang (termasuk anak-anak) yang mempunyai keterbatasan fisik, sensorik atau mental, atau tidak mempunyai pengalaman atau pengetahuan, kecuali jika mereka diawasi atau diajar mengenal penggunaan peralatan ini oleh orang yang bertanggung jawab terhadap keselamatan mereka.
21. Anak-anak harus diawasi untuk memastikan mereka tidak bermain dengan peralatan ini.

# PETUNJUK KESELAMATAN PENTING

Ketika menggunakan peralatan listrik, tindakan keselamatan dasar harus selalu dijalanakan, termasuk berikut ini:

Baca semua petunjuk sebelum menggunakan mesin jahit ini.

## BAHAYA

- Untuk mengurangi risiko kejutan listrik:

1. Mesin jahit ini tidak boleh ditinggalkan tanpa sengaja dalam kondisi tersambung aliran listrik.
2. Selalu cabut steker mesin jahit ini dari stopkontak segera sesudah penggunaan atau sebelum pembersihan.
3. Apabila lampu LED rusak atau pecah, lampu harus diganti oleh produsen atau agen servis atau orang yang memiliki kualitas setara dengan tujuan untuk menghindari bahaya.

## PERINGATAN

- Untuk mengurangi risiko luka bakar, kebakaran, kejut listrik, atau cedera:

1. Jangan biarkan mesin jahit ini dipakai sebagai mainan. Diperlukan perhatian seksama ketika mesin jahit ini digunakan oleh anak-anak atau digunakan di dekat anak-anak.
2. Gunakan mesin jahit ini hanya untuk keperluan sebagaimana dijelaskan dalam buku petunjuk ini. Hanya gunakan alat tambahan yang direkomendasikan oleh produsen sebagaimana termuat dalam buku petunjuk ini.
3. Jangan pakai mesin jahit ini jika kabel atau stekernya rusak, jika mesin jahit ini tidak bekerja sebagaimana mestinya, jika mesin jahit ini pernah jatuh atau rusak, atau jatuh ke air. Kembalikan mesin jahit ke dealer resmi atau service center terdekat untuk diperiksa, diperbaiki, atau disetel kelisrtikan atau mekaniknya.
4. Janganoperasikan mesin jahit jika ada lubang udara yang tersumbat. Bersihkan lubang ventilasi mesin jahit dan pedal/trap (injakan dinamo) dari timbunan kain tiras, debu, dan kain lepas.
5. Jauhkan jari dari semua bagian mesin yang bergerak. Berhati-hatilah di dekat jarum mesin jahit.
6. Selalu gunakan plat jarum yang tepat. Plat yang salah dapat menyebabkan jarum patah.
7. Jangan gunakan jarum bengkok.
8. Jangan tarik atau dorong kain saat menjahit. Ini bisa membengkokkan jarum sehingga dapat patah.
9. Matikan mesin jahit ("O") ketika menyetei di sekitar jarum, misalnya memasukkan benang ke jarum, mengganti jarum, memasang benang ke spul, atau mengganti sepat, dan lain-lain.
10. Selalu cabut steker dari stopkontak ketika melepas penutup, melumasi, atau menyetei sendiri mesin seperti disebutkan pada buku petunjuk ini.



# **SINGER®**

## **3342 PETUNJUK PENGGUNAAN**

